

E-MANUAL

Thank you for purchasing this Samsung product. To receive more complete service, please register your product at

www.samsung.com/register

Model_____ Serial No.____

Contents

Connecting Antenna and External devices

Antenna Connection

Video Device Connection

- 2 HDMI Connection
- 3 Component Connection
- 4 External Input Connection

TV Audio through the External Speakers

- 5 Digital Audio (Optical) Connection
- 6 Audio Output Connection

Connecting to a Computer

- 8 Connecting Through the HDMI Port
- 9 Connecting With the DVI to HDMI Cable
- 10 Connecting Through Samsung Link
- 10 Connecting Through Home Network (DLNA)

Connecting to a Mobile Device

- 12 Mobile Device Screen on TV (Screen Mirroring)
- 14 Connecting Mobile Devices without a Wireless Router (Wi-Fi Direct)
- 14 Connecting Through Samsung Link
- 15 Connecting Through Home Network (DLNA)
- 15 The name of the TV on the Network

Switching Between Video Sources

Using the Remote Control and Peripherals

Using the Remote Control on the Screen (Virtual Remote Control)

Controlling External Devices with the TV Remote (Universal Remote Setup)

- 18 Setting Up the Universal Remote Control
- 19 Controlling External Devices with the TV Remote
- 20 Universal Remote Features

Controlling the TV with a Keyboard

- 21 Connecting a Keyboard
- 21 Using the Keyboard

Controlling the TV with a Mouse

- 22 Connecting a Mouse
- 23 Using the Mouse

Entering Text Using QWERTY

24 Using Additional Functions

Internet Connection

Establishing a Wired Internet Connection

- 25 Using Cat 7 LAN Cables
- 26 Connecting to a Wired Internet Network Automatically
- 26 Connecting to a Wired Internet Network Manually

Establishing a Wireless Internet Connection

- 28 Connecting to a Wireless Internet Network Automatically
- 29 Connecting to a Wireless Internet Network Manually
- 30 Connecting to a Wireless Internet Network with WPS

Troubleshooting Internet Connectivity Issues

- 31 Troubleshooting Wired Internet Connectivity Issues
- 32 Troubleshooting Wireless Internet Connectivity Issues

Checking the Internet Connection Status

Smart Features

Smart Hub

- 34 Testing Smart Hub connections
- 35 Opening the First Screen
- 36 Moving to the Panel Screen
- 36 Using the Smart Hub Tutorial
- 36 Resetting Smart Hub

Using Smart Hub with a Samsung Account

- 37 Creating a Samsung Account
- 39 Signing in to a Samsung Account
- 40 Linking Your Samsung Account to External Service Accounts
- 41 Changing and Adding Information to Samsung Account
- 41 Deleting All Samsung Accounts from the TV

Using the SAMSUNG APPS Panel

- 43 Using Supported Features via the Pop-Up Menu Downloaded Apps
- 44 Installing an App
- 45 Default Apps
- 45 Rearranging Apps on the SAMSUNG APPS Screen
- 46 Deleting an App from the TV
- 46 Rating/Reviewing an App
- 47 Updating an App
- 47 SAMSUNG APPS Features

Using the On TV Panel

- 49 Using Supported Features via the Pop-Up Menu
- 50 Viewing Detailed Program Information
- 51 Configuring On TV Settings

Using the Multimedia (Playing Photos, Videos, and Music)

- 52 Playing Media Content Saved on a USB Device
- 53 Buttons and Functions Available While Viewing Photos
- 54 Buttons and Functions Available While Viewing Videos
- 56 Buttons and Functions Available While Playing Music
- 57 Functions on the Media Content List Screen

TV Viewing Features

Digital Broadcast Information at a Glance

- 58 Using the Guide
- 59 Checking the Current Program Info
- 59 Changing the broadcast signal
- 59 Digital Channel Signal Info and Strength

Setting Up a Schedule Viewing

- 60 Setting Up Schedule Viewing
- 61 Managing the Schedule Viewing List

Using the Channel List

Registering, Removing, and Editing Channels

- 63 Registering and Removing Channels
- 64 Editing Registered Channels
- 64 Program Rating Lock

Creating a Personal Favorites List

- 65 Registering Channels as a Favorites
- 66 Viewing Favorites List Channels Only

Editing a Favorites List

67 Edit Favorites Screen Menu Items

Watching a Sports Game Realistically (Soccer Mode)

TV-Viewing Support Features

- 70 Showing Captions
- 71 PIP Broadcast Viewing
- 72 Scanning for Available Channels
- 72 Selecting the Broadcast Audio Options
- 73 Fine-Tuning the Screen
- 73 Color System

Picture and Sound Settings

Changing the Picture Mode and Adjusting the Picture Quality

- 74 Choosing the Right Picture Mode for the Viewing Environment
- 75 Adjusting the Picture Quality for Each Picture Mode
- 76 Fine-Tuning Each Picture Mode (Advanced Settings)
- 78 Adjusting the Picture for Easier Viewing (Picture Options)

Viewing in 3D

- 79 Starting 3D
- 80 Changing the 3D Mode
- 81 Adjusting the 3D Effect

Picture Support Functions

- 82 PIP Broadcast Viewing
- 83 Changing the Picture Size and Position
- 84 Listening to Audio Only with the Screen Turned Off (Picture Off)
- 84 Resetting the Picture Mode Settings

Changing the Sound Mode and Using Sound Effects

- 85 Choosing the Right Sound Mode for the Environment
- 86 Using Sound Effects

Sound Support Functions

- 87 Selecting Speakers
- 87 Designating the TV's Installation Type
- 88 Enabling Digital Audio Output
- 88 Listening to 3D Audio in 3D Mode
- 88 Resetting All Sound Settings

General

Setting the Time and Using the Timer

- 89 Setting the Current Time
- 90 Using the Timers

Using the Screen Burn Protection and Energy Saving Features

- 92 Preventing Screen Burn
- 92 Using Energy Saving Features

Using the e-Manual

- 93 Launching the e-Manual
- 93 Additional e-Manual Features
- 94 Accessing the Menu from the e-Manual (Try Now)
- 94 Loading Reference Pages
- 94 Updating the e-Manual to the Latest Version

Updating the TV's Software

- 95 Update now
- 96 Enabling Automatic Software Updates

Protecting the TV from Hacking and malicious code

- 96 Checking the TV and Connected Storage Media
- 97 Automatically Scanning when the TV is Powered On
- 97 Automatically Adding malicious code to the Blocked List

Using Other Functions

- 98 Adjusting the Menu Transparency
- 98 White Text on Black Background (High Contrast)
- 98 Expanding the Smart Hub's Focus Area
- 98 Checking Notifications
- 99 Changing the Menu Language
- 99 Setting Up a Password
- 99 Enabling Game Mode
- 100 Enjoying Rich Colors and Superior Picture Quality (BD Wise)
- 100 Locking/Unlocking the Panel Keys
- 100 Showing/Hiding the Samsung Logo while Booting
- 100 Enabling the AV Color System
- 101 Registering the TV as a DivX-Certified Device (Watching Paid DivX Movies)
- 102 Restoring the TV to the Factory Settings
- 102 Turning the TV into a Display Model (exclusively for retail stores)

Data Service

- 103 Auto Run Data Service
- 103 Using Data Service

Troubleshooting

Getting Support

104 Support through Remote Management

105 Finding the Information You Need for Service

There is a problem with the picture.

106 Testing the Picture

I can't hear the sound clearly.

108 Testing the Sound

I can't see 3D images clearly.

109 Testing 3D Picture Quality

There is a problem with the broadcast.

The computer won't connect.

I can't connect to the Internet.

Data Service

I am having trouble launching/using apps.

My file won't play,

I want to reset the TV.

Other Issues

Appendix

133 CEA-861

License

Glossary

Read Before Using 3D Viewing Mode		
115 3D Precautions		
118 Supported Resolutions for 3D Modes		
Read Before Using Apps		
Read Before Using the Web Browser		
Read Before Playing Photo, Video, or Music Files		
122 Photo, Video, and Music File Use Limitations		
122 Sending Files between Storage Devices Table		
123 Supported External Subtitles		
123 Supported Internal Subtitles		
124 Supported Image Formats and Resolutions		
124 Supported Music Formats and Codecs		
125 Supported Video Codecs		
Read After Installing the TV		
127 Picture Sizes and Input Signals		
127 Installing an Anti-Theft Lock		
128 Read Before Setting Up a Wireless Internet Connection		
Read Before Connecting a Computer (Supported Resolutions) - For the LED 5, 6 series models		
129 IBM		
129 MAC		
130 VESA DMT		
Read Before Connecting a Computer (Supported Resolutions) - For the LED 4 series models		
131 IBM		
131 MAC		
132 VESA DMT		
Supported Resolutions for Video Signal		

Antenna Connection

If you are not connecting your TV to a cable or satellite box, you must connect an antenna or a cable outlet to the TV to receive broadcast signals.

Connect a cable from an antenna or cable outlet to the ANT IN connector as shown in the diagram below.

An antenna connection is not necessary when a cable box or satellite receiver is used.



Video Device Connection

Your TV has a variety of connectors for video input from external devices such as cable boxes, satellite receivers, Blu-ray players, DVD players, camcorders, and gaming consoles. Below is a list of featured connectors shown in descending order of picture quality.

- HDMI
- Component
- External Input

Connect a video device to the TV via an HDMI connector for the best picture quality. If the device does not have an HDMI connector, try a component connector to get the next best picture quality.

- The number of connectors and their names and locations may vary depending on the model.
- Refer to the external device's operating manual when connecting it to the TV. The number of external device connectors and their names and locations may vary depending on the manufacturer.

HDMI Connection

Before connecting any external devices and cables to the TV, first verify the model number of the TV you purchased. A sticker containing the model number is attached to the back of the TV.

The connection method varies depending on the model.

The following types of HDMI cables are recommended:

- High-Speed HDMI Cable
- High-Speed HDMI Cable with Ethernet
- Use an HDMI cable with a thickness of 14 mm or less.
- Using a non-certified HDMI cable may result in a blank screen or a connection error,
- Some HDMI cables and devices may not be compatible with the TV due to different HDMI specifications.
- This TV does not support HDMI Ethernet Channel, Ethernet is a LAN (Local Area Network) built with coaxial cables standardized by the IEEE.

Refer to the diagram and connect the HDMI cable to the video device's HDMI output connector and the TV's HDMI input connector.

The number of connectors and their names and locations may vary depending on the model.



Once the connection has been made, you will be able to select the connected external device using the SOURCE button,

Component Connection

Before connecting any external devices and cables to the TV, first verify the model number of the TV you purchased. A sticker containing the model number is attached to the back of the TV.

The connection method varies depending on the model.

Refer to the diagram and connect the component cable to the TV's component input connectors and the device's component output connectors.

Make sure the cable colors match the connector colors.



Once the connection has been made, you will be able to select the connected external device using the **SOURCE** button.

External Input Connection

Before connecting any external devices and cables to the TV, first verify the model number of the TV you purchased. A sticker containing the model number is attached to the back of the TV.

The connection method varies depending on the model.

Refer to the diagram and connect the AV cable to the TV's AV input connectors and the device's AV output connectors.

If you are using the TV's AV input connectors, connect the device's audio output to the TV using a Y connector,



Once the connection has been made, you will be able to select the connected external device using the SOURCE button.

TV Audio through the External Speakers

Your TV has a variety of connectors for audio input from devices such as Blu-ray players and DVD players and for audio output to such devices as amplifiers. The connectors are listed below.

- Digital Audio (Optical)
- Audio
- For better audio quality, it is a good idea to use an AV receiver.
- The number of connectors and their names and locations may vary depending on the model.
- Refer to the external device's operating manual when connecting it to the TV. The number of external device connectors and their names and locations may vary depending on the manufacturer.

Digital Audio (Optical) Connection

Before connecting any external devices and cables to the TV, first verify the model number of the TV you purchased. A sticker containing the model number is attached to the back of the TV.

The connection method varies depending on the model.

Connecting an AV receiver to the TV via a digital audio (optical) connector lets you listen to digital audio.

- Connecting a device using an optical cable does not automatically turn off the TV speakers. To turn off the TV's speakers, set TV Sound Output (Sound > Speaker Settings > TV Sound Output) to something other than TV Speaker.
- Adjust the audio device's volume using its remote control.
- An unusual noise coming from the audio device while you are using it may indicate a problem with the audio device itself. If this occurs, ask for assistance from the audio device manufacturer.
- Digital audio is only available with 5,1-channel broadcasts.

Refer to the diagram and connect the optical cable to the TV's digital audio output connector and the device's digital audio input connector,



Audio Output Connection

Before connecting any external devices and cables to the TV, first verify the model number of the TV you purchased. A sticker containing the model number is attached to the back of the TV.

The connection method varies depending on the model.

Refer to the diagram and connect the audio cable to the TV's audio output connector and the device's audio input connector,



Connecting to a Computer

You can directly connect a computer to the TV or to the network to view the computer screen or content on the TV. Connect the computer to the TV as follows.

• Connecting through the HDMI Port

You can connect the computer to the TV using the HDMI cable to display the computer screen on the TV.

Connecting with the DVI to HDMI cable

You can connect a computer to the TV by connecting the computer's DVI port to the TV's HDMI port with the DVI to HDMI cable to display the computer screen on the TV.

Connecting Through Samsung Link

Quickly access the photo, video and music files saved on a computer on which Samsung Link software is installed, even if you do not connect the TV directly to the computer.

Connecting Through Home Network (DLNA)

Quickly access the photo, video and music files saved on a computer by connecting the TV and the computer to the same router or AP.

Connecting Through the HDMI Port

First, check the TV model before connecting an external device to the TV. On the back of the TV, the model number sticker is attached.

The connection method differs depending on the model.

For HDMI connection, one of the following HDMI cable types is recommended:

- High-Speed HDMI Cable
- High-Speed HDMI Cable with Ethernet
- Use an HDMI cable with a thickness of 14 mm or less. Using a non-certified HDMI cable may result in a blank screen or a connection error.
- Some HDMI cables and devices may not be compatible with the TV due to different HDMI specifications.
- This TV does not support HDMI Ethernet Channel, Ethernet is a LAN (Local Area Network) built on coaxial cables standardized by the IEEE,
- Some computers do not support HDMI interface depending on the graphics adapter specifications. In this case, use a DVI to HDMI cable to connect the computer to the TV. For more information, refer to "Connecting With the DVI to HDMI Cable".

Refer to the diagram and connect the HDMI cable to the external video device's HDMI output connector and the TV's HDMI input connector.

The number of ports, and their names and locations may vary depending on the model,



Once the connection has been made, you will be able to select the connected external device using the SOURCE button.

Connecting With the DVI to HDMI Cable

If the graphics adapter of your computer does not support HDMI interface, connect the computer to the TV with the DVI (Digital Visual Interactive) to HDMI cable. However, the DVI to HDMI connection is only supported by the HDMI port for DVI and it does not support audio signal transmission. To listen to the computer sound, connect the external speaker to the computer's audio output connector.

For the resolutions supported by the TV, refer to "Read Before Connecting a Computer (Supported Resolutions) - For the LED 5, 6 series models".

Refer to the diagram and connect an HDMI-to-DVI cable to the TV's HDMI (DVI) port and the computer's DVI output port.



Once the connection has been made, you will be able to select the connected external device using the SOURCE button.

Connecting Through Samsung Link

Quickly access the photo, video and music files saved on a computer on which Samsung Link software is installed. In addition, using Samsung Link, you can play the content of the computer, which is registered to Samsung Link with your Samsung account even if the computer and the TV are not connected to the same router or AP.

- 1. On a computer, connect to the Samsung content and service portal (http://link.samsung.com) and sign into a Samsung account.
 - To install the Samsung Link desktop software, you need to sign into your Samsung account. If you don't have a Samsung account, create one first.
- 2. Install the Samsung Link desktop software. When the installation is complete, the computer will be registered to Samsung Link.
- 3. Specify a folder to connect to the TV. You can play the photo, video and music files in the specified folder on the TV screen.
 - For more information on using the Samsung Link desktop software, refer to the Help section of the software.

Connecting Through Home Network (DLNA)

Quick access and play the photo, video and music files in a computer on the TV screen.

- 1. Connect the TV and the computer to the same router or AP. Once you connect them to one router or AP, a home network is configured.
 - Home Network (DLNA) refers to the technology to share content between TV, computer and mobile device by connecting them to one wired or wireless router,
- On the computer, select [Control Panel] > [Network and Internet] > [Network and Sharing Center]
 > [Change advanced sharing settings] and select [Choose media streaming options...] to activate media streaming.
- 3. From the list, set the TV to [Allowed].
- 4. Launch Windows Media Player on a computer, select [Settings] > [Library Management], add the location where photo, video and music files are saved to play them on the TV screen.
 - Alternatively, once you move the files to the folder that is specified by Windows Media Player by default, you can play them on the TV screen.
 - As long as File Sharing is activated, unauthorized access may be allowed. When you do not need to access data, disable the File Sharing.

Connecting to a Mobile Device

You can directly connect a mobile device such as a smartphone or tablet to the TV, or connect it to the network and play the mobile device screen or content on the TV screen. Connect the mobile device to the TV as follows.

• Mobile Device Screen on TV (Screen Mirroring)

Wirelessly connect the TV and the mobile device with the Screen Mirroring function, you can view the mobile device screen on the TV screen,

This option is available only on a mobile device that supports the mirroring function.

Connecting Mobile Devices without a Wireless Router (Wi-Fi Direct)

Wi-Fi Direct enables you to connect the TV and the mobile device without a router or AP. Quick access and play the photo, video and music files in the connected mobile device on the TV screen.

This option is available only on a mobile device that supports the Wi-Fi Direct function.

• Connecting Through Samsung Link

Samsung Link enables you to play the photo, video and music files saved on a Samsung Link enabled mobile device with ease without the need for connection to the TV.

Connecting Through Home Network (DLNA)

You can conveniently play the photo, video and music files saved on a mobile device by connecting the mobile device and the TV to the same router or AP.

Mobile Device Screen on TV (Screen Mirroring)

MENU > Network > Screen Mirroring (ry Now)

Wirelessly connect a mirroring function-enabled mobile device to the TV to play the video and listen to the audio of the mobile device on the TV. Screen Mirroring refers to the function that outputs the video and audio of the mobile device on the TV as well as the mobile device.

- To use the Screen Mirroring function, the mobile device must support the Screen Mirroring function such as AllShare Cast. To check whether your mobile device supports the Screen Mirroring function, please visit the mobile device manufacturer's website.
- The video or audio may intermittently stop depending on the network condition.

Connecting via a mobile device...

- 1. On the mobile device, run **Screen Mirroring**. The mobile device searches for available devices to connect to.
- 2. From the search result list, select TV. The TV displays a pop-up window.
- 3. In the pop-up window, select Allow to connect the mobile device.
 - All previously allowed mobile devices will automatically connect without needing approval.
 - If you select **Deny**, the device won't appear and can't be activated in this way, Navigate to **Network** > **Screen Mirroring** > **Device Manager** to allow the previously denied mobile device.

Not searching for the TV on mobile devices...

- 1. Navigate to Network > Screen Mirroring to run Screen Mirroring. Also, you can select Screen Mirroring on a list by pressing SOURCE button.
- 2. Run mirroring on the mobile device. Display a list while automatically searching for mobile devices.
- 3. Select the TV and it connects automatically.
 - When the mobile devices cannot connect, try turning the TV off and on.

Allow/Reject the connection via mobile devices

- This is only available for watching when mobile devices allow the connection,
- 1. Navigate to Network > Screen Mirroring > Device Manager to select Device Manager. This displays a list of required mobile devices connection.
- 2. You can allow access or deny connections with mobile devices.

Connecting Mobile Devices without a Wireless Router (Wi-Fi Direct)

MENU > Network > Wi-Fi Direct (Try Now)

You can directly connect a mobile device with Wi-Fi Direct feature to the TV without using a wireless router or AP. By connecting a mobile device with the TV through **Wi-Fi Direct**, you can play photo, video and music files saved in the mobile device on the TV.

- This option is available only on a mobile device that supports the Wi-Fi Direct function. Please check if your mobile device supports Wi-Fi Direct.
- Enable Wi-Fi Direct on the mobile device and then navigate to Network and select Wi-Fi Direct
 on the TV. The TV automatically scans for and displays a list of available devices. The TV's name
 also appears on the mobile device.
- 2. Select the device from the list to initiate a connection. If a connection request is made by the TV, a permission message appears on the mobile device and vice versa.
- 3. Allow the connection, Then, the TV and the mobile device are connected,

Connecting Through Samsung Link

Samsung Link enables you to play the photo, video and music files saved on a Samsung Link-enabled mobile device with ease. In addition, using Samsung Link, you can play the content of the mobile device, which is registered to Samsung Link with your Samsung account, even if the mobile device and the TV are not connected to the same router or AP.

- 1. Run the Samsung Link app on the mobile device and then sign in with your Samsung account.
 - To use Samsung Link, you have to sign in with a Samsung account, If you don't have a Samsung account, create one first.
- 2. Quickly access and play the photo, video and music files saved on the mobile device on which you launched the Samsung Link app with your Samsung account.
 - For more information on using the Samsung Link app, refer to the Help section of the manual,

Connecting Through Home Network (DLNA)

You can conveniently play the photo, video and music files in a mobile device on the TV.

- 1. Connect both the TV and the mobile device to the same router or AP. Once you connect them to a single router or AP, a home network is configured.
 - Home Network (DLNA) refers to the technology to share content between TV, computer and mobile device by connecting them to one wired or wireless router,
- Enable File Sharing on the mobile device. You can play the content shared by the mobile device on the TV.
 - As long as File Sharing is activated, unauthorized access may be allowed. When you do not need to access data, disable the File Sharing.

The name of the TV on the Network

MENU > Network > Device Name (Try Now)

Choose or specify the name of the TV that will appear on mobile devices and laptop computers.

- Select Device Name from the Network menu, and then choose a name from the list that appears.
 Alternatively, select User Input to enter a name manually.
- 2. Check the name from a mobile device or laptop computer.

Switching Between Video Sources

Press the SOURCE button to switch between external devices connected to the TV. For example, to switch to a game console connected to the second HDMI connector, press the SOURCE button. From the Source list on the Source screen, select HDMI2.

The connector names may vary depending on the product.

The following options are also available on the Source screen:

Option menu (Tools)

Using your remote, highlight the source you want to assign a device name to,

Open the option menu using your remote.

- The available options for each of the connectors may vary.
- Edit Name: You can rename devices connected to the TV to more easily identify external sources. For example, you can designate a computer connected to the TV via an HDMI-DVI cable as DVI PC. Alternatively, simply designate a computer connected to the TV via an HDMI cable as PC. You can also designate an AV device connected to the TV via an HDMI-DVI cable as DVI Devices.
- Information: View detailed information about the connected devices.
- Remove USB: Use to safely remove a USB device connected to the TV.
 - This option is only available when a USB device has been selected,

Universal Remote Setup

Availability depends on the specific model.

Select Universal Remote Setup from the screen to configure the universal remote function. By configuring a universal remote control, you can control cable boxes, Blu-ray players, home theaters, and other external devices using a single remote control. Refer to the "Controlling External Devices with the TV Remote (Universal Remote Setup)" section for more information on configuring the universal remote.

Using the Remote Control on the Screen (Virtual Remote Control)

Availability depends on the specific model and area.

Press the **KEYPAD** item to display the Onscreen Remote control on the screen. You can easily enter digits, control content, and use TV buttons with the Onscreen Remote.

The Onscreen Remote buttons may vary depending on the current status of the TV.



Button	Description
MENU	Displays the menu on the screen.
INFO	Shows the information about the current digital broadcast program or content.
Speaker Settings	You can select the speakers which you want to use to listen to the TV sound. To set this option, external speakers must be connected to the TV.
Web Browser	Launches the Web Browser.
PIP	You can display the video from an external device or computer on the main screen and the TV as a picture-in-picture.
3D	You can turn the 3D effect on or off. Availability depends on the specific model and area.
Schedule Manager	You can move to the Schedule Manager screen.
MEDIA PLAY	Run the Media Play. Lets you play media content saved on USB devices.
P.Size	You can change the picture size.
P.Mode	Lets you select the Picture mode.
e-Manual	You can launch the e-manual.

Controlling External Devices with the TV Remote (Universal Remote Setup)

Availability depends on the specific model and area,

MENU > System > Universal Remote Setup

The universal remote control feature lets you control cable boxes, Blu-ray players, home theaters, and other third-party external devices connected to the TV using the TV's remote control. In order to use the TV's remote control as a universal remote, you must first connect the IR extension cable (included).

Certain external devices connected to the TV may not support the universal remote feature.

Setting Up the Universal Remote Control

Before connecting any external devices and cables to the TV, first verify the model number of the purchased TV. A sticker containing the model number is attached to the back of the TV.



The connection method varies depending on the model.

To use the TV remote as a universal remote, connect the IR extension cable (included) to the TV and position it within 10 cm of the external device's remote control receiver.

6

The color and design of the IR extension cable may vary depending on the model.

Connect the IR extension cable to the TV's IR output connector as shown in the diagram and place the transmitter end within 10 cm of the external device's receiver pointing in the direction of the remote receiver. However, there must be no obstacles between the IR extension cable and the external device. The presence of obstacles interferes with the transmission of the remote control signal.



Controlling External Devices with the TV Remote

External Device Registration

- 1. Turn on the external device to set up the universal remote function for, and press **SOURCE** to bring up the **Source** screen.
- 2. Select Universal Remote Setup from the screen. This initiates the universal remote setup process.
- 3. Follow the onscreen instructions and register the external device.

Using the TV Remote

Registering an external device to the TV remote also registers the connector through which the device is connected. You can control external devices using the TV remote control simply by selecting the external device without any additional operations.

Universal Remote Features

- 1. Press the **SOURCE** button to bring up the **Source** screen.
- 2. Select Universal Remote Setup. This initiate the universal remote setup process.
- Select the desired external device on the Universal Remote Setup screen. Following features are also available.

Use with Home Theater

Listen to the audio from the external device through the connected home theater,

This function is available only on the set-top box or Blu-ray player.

Use with Set-Top Box

Listen to the audio from the set-top box through the home theater that is connected to the TV.

This function is available only on the home theater.

Use with Blu-ray player

Listen to the audio from the Blu-ray player through the home theater that is connected to the TV.

This function is available only on the home theater.

Source Setup

Change the TV's input connector that the external device is connected to,

Synced TV power

Configure the set-top box to turn off when the TV is turned off.

This function is available only on the set-top box.

Rename

Rename the registered external device (up to 15 characters long).

Delete

Remove the registered external device.

Controlling the TV with a Keyboard

MENU > System > Device Manager > Keyboard Settings (Try Now)

You can use a keyboard to control the TV with greater ease and comfort,

Certain models do not support USB HID class keyboards.

Connecting a Keyboard

Connecting a USB Keyboard

Plug the keyboard cable into the TV's USB port. A connection message will appear on the screen.

Using the Keyboard

Use the following remote features with the USB keyboard connected to the TV.

- Arrow Keys (moving the focus), Windows Key (MENU Button), Menu List Key (TOOLS Button), Enter Key (Select/run item), ESC (RETURN Button), Number Keys (Number Buttons)
- F1 (▲), F2 (₺), F3 (₺), F4 (₺), F5 (₺), F6 (SOURCE Button), F7 (CH LIST Button), F8 (MUTE Button), F9/F10 (Volume Buttons), F11 / F12 (Channel Buttons)
- Page Up/Page Down: Scroll web browser pages up/down.

Changing Keyboards

Select System > Device Manager > Keyboard Settings > Select Keyboard. Designate which keyboard to use. Try Now

Only one keyboard can be used at a time.

Input Languages, Keyboard Type, and Switch Language Key

Select System > Device Manager > Keyboard Settings > Keyboard Options. The following options are available: Try Now

Keyboard Language

If the keyboard supports multiple languages, choose which language you want to use from the list.

Keyboard Type

Specify the type of language selected under **Keyboard Language**.

The Keyboard Type list varies depending on which language was selected under Keyboard Language.

Switch Input Language

If the keyboard supports multiple languages, choose from the list which key to use to switch between languages.

Controlling the TV with a Mouse

MENU > System > Device Manager > Mouse Settings (Try Now)

You can use a keyboard to control the TV with greater ease and comfort.

Certain models do not support USB HID class keyboards.

Connecting a Mouse

Connecting a USB Mouse

Plug the mouse cable into the TV's USB port. A connection message will appear on the screen.

Using the Mouse

Once a USB mouse is connected to the TV, a pointer will appear on the TV's screen. You can use this pointer to control the TV as you would a computer,

Selecting and Running an Item

Left-click on the mouse.

Displaying the Volume, Mute, and Channel Buttons

Select the volume/channel icon on the screen while watching TV. Use the on-screen buttons to adjust the volume or switch the channel.

Select the volume/channel icon again to hide the buttons.

Showing Tools Buttons

Right-clicking shows the Tools buttons on the screen so that you can easily use the TV functions.

The Tools buttons may vary depending on the function.

Displaying the Context-sensitive Menu on Smart Hub

On the Smart Hub screen, navigate to an item, and hold down the left mouse button for 1 second. The context-sensitive menu available to the selected item appears.

The context-sensitive menu may vary depending on the item you selected.

Scrolling the TV Menu or Screen

Move the mouse wheel up or down, This scrolls the TV menu or screen up/down,

Exiting the TV Menu or Feature

Click on the X button. This closes the menu.

The X button appears on the TV menu when a mouse is being used. Left-clicking once while using a feature displays the X button on the current screen,

Changing Mouse

Select System > Device Manager > Mouse Settings > Select Mouse. Designate which mouse to use.

Try Now

Only one mouse may be used at a time.

Changing Mouse Buttons and Pointer Speed

Select System > Device Manager > Mouse Settings > Mouse Options. The following options are available: Try Now

Primary Button

Choose which (left or right) button to use to select and run items.

Pointer Speed

Adjust the movement speed of the pointer that appears on the screen,

Entering Text Using QWERTY

A QWERTY keypad appears when you need to enter text (entering the network password, logging into your Samsung account, etc.), allowing you to enter text using your remote control.

Using Additional Functions

Select on the QWERTY keyboard screen. The following options are available:

Recommended text

Enable/disable the Recommended Text feature. Enabling the Recommended text feature allows you to quickly enter text starting with the characters you typed in by showing the recommended words. To enter the word "Internet," for example, all you have to do is enter "In" and select the word "Internet" from the list of recommended words. And the selected word will be memorized by the keyboard so that you can enter the same text with ease using this function.

Reset recommended text data

Delete both the recommended words and the memorized words to clear the list,

Predict Next Letter

Enable/disable the Predict Next Letter feature. Enabling the Predict Next Letter feature eliminates the need to find and select individual character keys. To enter the word "Internet," for example, select "I". A predicted word will then appear next to the I key. Simply select the predicted word to enter "Internet".

This feature is limited to words that have previously been added to the dictionary.

Establishing a Wired Internet Connection

Connecting the TV to the Internet gives you access to online services and SMART features, and lets you update the TV's software quickly and easily through the Internet.


Using Cat 7 LAN Cables

Use Cat 7 LAN cables to link your TV to the Internet Access Points.


The TV will not be able to connect to the Internet if the network speed is below 10Mbps.

There are three ways to connect the TV to your Internet Access Points. Using Cat 7 cables, connect the TV to the Access Points as shown in one of the following illustrations.


External Modem

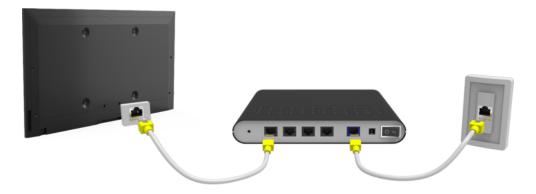

• 1 IP Router + 2 External Modem

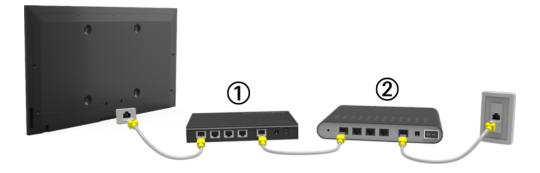

Wall-mounted LAN Outlet

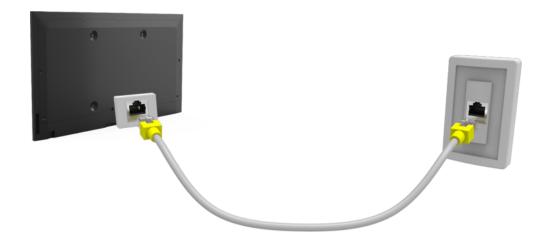

Connecting to a Wired Internet Network Automatically

MENU > Network > Network Settings (Try Now)

Automatically connect to an available network.


- 1. Set the **Network type** to **Wired**, and then select **Connect**.
- 2. The TV attempts to connect to an available network. Once it is successful, you will see a confirmation message. Select **OK**. If the attempt fails, try again, or connect manually.

Connecting to a Wired Internet Network Manually

MENU > Network > Network Settings

With networks that require a static IP address, you will need to enter the IP address, subnet mask, gateway, and DNS values manually to connect to the network. To get these values, contact your Internet Service Provider (ISP).

- Refer to the "Dynamic versus Static IP Addresses" section for more information on dynamic IP and static IP addresses.
- 1. Set the Network type to Wired, and then select Connect.

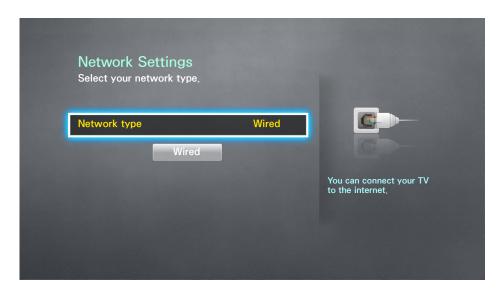

2. Select **Stop** when the TV attempts to connect to the network. Once the network connection has been interrupted, select **IP Settings**.



3. In the IP Settings screen, set IP Setting to Enter Manually.



- 5. Repeat the process for Subnet Mask, Gateway, and DNS Server.
- When done, select OK.
- 7. The TV attempts to connect to the network again using the settings you entered. Once it has established the connection, it displays a confirmation message. Select **OK**.
 - The network connection speed may differ depending on the DNS server settings.
 - For details on the DNS server settings, contact your Internet service provider (ISP).

Establishing a Wireless Internet Connection

Connecting the TV to the Internet gives you access to online services and SMART features, and lets you update the TV's software quickly and easily through the Internet.



Connecting to a Wireless Internet Network Automatically

MENU > Network > Network Settings

Connect the TV to the Internet via a wireless router. Make sure you have the wireless router's SSID (name) and security key settings before attempting to connect. The security key can be found on the wireless router's configuration screen.

- On the Network Settings screen, set Network type to Wireless. The TV automatically displays a list of available wireless networks.
- 2. Select a network (SSID), If the network you want doesn't appear in the list, select Add Network, and enter the network's SSID manually.
- Using the on-screen keyboard that appears, enter the security key. When finished, select Done.
 If the selected network is not security-enabled, the TV will by-pass the on-screen keyboard and attempt to connect right away.
 - To select a character on the on-screen keyboard, highlight the character and then press
 the button. Select Caps to view capital letters. Select the 123#& key to view additional
 characters.
 - To view the security key as you enter it, select Show Password.
- 4. The TV attempts to connect to the network. Once a connection is established, the TV displays a confirmation message. Select **OK**. If the attempt fails, try again or connect manually.

Connecting to a Wireless Internet Network Manually

MENU > Network > Network Settings

With networks that require a static IP address, you will need to enter the IP address, subnet mask, gateway, and DNS values manually to connect to the network. To get the IP address, subnet mask, gateway and DNS values, contact your Internet Service Provider (ISP).

- Refer to the "Dynamic versus Static IP Addresses" section for more information on dynamic IP and static IP addresses
- On the Network Settings screen, set Network type to Wireless. The TV automatically displays a list of available wireless networks.



- 2. Select a network (SSID). If the network you want doesn't appear in the list, select Add Network, and enter the network's SSID manually.
- Using the on-screen keyboard that appears, enter the security key. When finished, select Done.
 If the selected network is not security-enabled, the TV will by-pass the on-screen keyboard and attempt to connect right away.
- Select Stop when the TV attempts to connect to the network. Once the network connection has been interrupted, select IP Settings.



5. In the IP Settings screen, set IP Setting to Enter Manually.



- 6. Press the displayment button enter a value for the IP Address using the number buttons, and then select OK.
- 7. Repeat the process for Subnet Mask, Gateway, and DNS Server.
- 8. When done, select OK.
- 9. The TV attempts to connect to the network again using the entered settings. Once it has established the connection, it displays a confirmation message. Select **OK**.
 - Network connection speeds may differ depending on the DNS server settings.
 - For details on the correct DNS server settings, contact your Internet service provider (ISP),

Connecting to a Wireless Internet Network with WPS

MENU > Network > Network Settings

If the router has a WPS push button, you can use it to connect the TV to the router automatically. WPS automatically configures the SSID and WPA key settings.

- Your router must support WPS to use the WPS functionality,
- On the Network Settings screen, set Network type to Wireless. The TV automatically displays a list of available wireless networks.
- 2. Select WPS (PBC), and then press the router's WPS or PBC button within two minutes.
- 3. The TV automatically acquires the SSID and security key settings, and then connects to the network. Once a connection is established, the TV displays a connection message, Select OK.

Troubleshooting Internet Connectivity Issues

If you are not able to connect the TV to the Internet read the information below.

Troubleshooting Wired Internet Connectivity Issues

No network cable found (Try Now (Try Now)

Make sure the network cable is plugged in. If it is connected, make sure the router is turned on. If it is on, try turning if off and on again.

IP auto setting failed (Try Now

Do the following or configure the IP Settings manually.

- 1. Ensure that the DHCP server is enabled on the router and reset the router,
- 2. If this does not work, contact your Internet Service Provider for more information.

Unable to connect to the network (Try Now

Do the following:

- 1. Check all IP Settings.
- 2. Ensure that the DHCP server is enabled on the router, Then, unplug the router and plug it back in.
- 3. If this does not work, contact your Internet Service Provider for more information.

Connected to a local network, but not to the Internet (Try Now)

- 1. Make sure that the Internet LAN cable is connected to the router's external LAN port.
- 2. Check the DNS values in the IP Settings.
- 3. If the problem persists, contact your Internet Service Provider.

Network setup is complete, but unable to connect to the Internet (Try Now)

If the problem persists, contact your Internet Service Provider,

Troubleshooting Wireless Internet Connectivity Issues

Wireless network connection failed, Try Now Try Now

Selected wireless router not found, Go to Network Settings and select the correct router,

Unable to connect to a wireless router (ry Now (ry Now

Check the following:

- 1. Check if the router is turned on. If it is, turn it off and on again.
- 2. Enter the correct security key if required.

IP auto setting failed (Try Now

Do the following or configure the IP Settings manually.

- 1. Make sure that the DHCP server is enabled on the router. Then, unplug the router and plug it back in.
- 2. Enter the correct security key if required.
- 3. If this does not work, contact your Internet Service Provider for more information.

Unable to connect to the network (Try Now)

Do the following:

- 1. Check all IP Settings.
- 2. Enter the correct security key if required.
- 3. If this does not work, contact your Internet Service Provider for more information.

Connected to a local network, but not to the Internet (Try Now)

- 1. Make sure that the Internet LAN cable is connected to the router's external LAN port.
- 2. Check the DNS values in the IP Settings.
- 3. If the problem persists, contact your Internet Service Provider.

Network setup is complete, but unable to connect to the Internet (Try Now)

If the problem persists, contact your Internet Service Provider.

Checking the Internet Connection Status

MENU > Network > Network Status (Try Now)



The screen shown may vary depending on the model.

View the current network and Internet status.

Smart Hub

MENU > Smart Hub > Open Smart Hub (Try Now)

With Smart Hub, you can surf the web, download apps, and stay in touch with family and friends through social networking services. In addition, you can enjoy photo, video, and music files stored on external storage devices.

- Some of the Smart Hub services for pay services. To use a for pay service, you must have an account with the service provider or a Samsung Apps TV account, Refer to the "Using Smart Hub with a Samsung Account" section for more information about a Samsung account,
- The TV must be connected to the Internet in order to use Smart Hub.
- Smart Hub features may not be available depending on the service provider, language, or region.
- To use Smart Hub, you must agree to the end user agreement and privacy policy. Otherwise, you will not be able to access the features and services associated with them. You can view the entire content of the Terms & Policy by navigating to Smart Hub > Terms & Policy. If you want to stop using Smart Hub, you can cancel the agreement. Try Now

Testing Smart Hub connections

MENU > Support > Self Diagnosis > Smart Hub Connection Test (Try Now

If Smart Hub is not functioning, navigate to Support > Self Diagnosis > Smart Hub Connection Test. Diagnose the problem by checking the internet connection, your ISP, the Samsung server and the Samsung Apps panels.

After completing the test, if Smart Hub continues to have problems, contact your Internet Service Provider or a Samsung Contact Center,

Opening the First Screen

Press the button while watching TV to open the First Screen.

On the **First Screen**, search through favorite apps, channels or sources and quickly access previously run or frequently used functions.

Setting your favorite item

- 1. Press the button to open the First Screen, and move to a desired item.
- 2. Press and hold the button. The Options menu appears.
- 3. In the Options menu, select Add to Favorites to add the selected item to the favorite list, which will move top of the list.
 - To delete a favorite item, select it and press and hold the display the context menu. Then, select Remove from Favorites.

Deleting browsing history

- 1. Press the button to open the First Screen, and select Clear All. You will be asked to confirm your selection.
- 2. Select Yes on the screen. Your browsing history is deleted completely.
 - However, the Favorites list items will not be deleted.
 - You can also delete your browsing history by selecting Clear All in the Smart Hub > First Screen Settings menu.

Moving to the Panel Screen

Press the button to launch Smart Hub. Select an icon on top of the screen to use the services of the corresponding panel.

• G SAMSUNG APPS

You can enjoy variety of free and for pay news, sports, weather, and gaming apps on the TV as you would on a smart phone or tablet,

On TV

Availability depends on the specific area.

You can purchase and view a movie or TV program directly through the app provided by Smart Hub without connecting an external video source such as a DVD or Blu-ray player,

Using the Smart Hub Tutorial

MENU > Support > Smart Hub Tutorial

Select Support > Smart Hub Tutorial, This will familiarize yourself with the basics of Smart Hub and panels.

Resetting Smart Hub

MENU > Smart Hub > Smart Hub Reset

It is possible to remove Samsung accounts and everything linked to them, including apps, from the TV. Enter the password when accessing this menu.

Using Smart Hub with a Samsung Account



The screen shown may vary depending on the model.

Creating a Samsung Account

MENU > Smart Hub > Samsung Account (Try Now)

Some of the Smart Hub services are paid services. To use a for pay service, you must have an account with the service provider or a Samsung Apps TV account (a Samsung account).

You can create a Samsung account using your email address as your ID.

- To create a Samsung account, you must be over 14 years old.
- To create a Samsung account, you must agree to the Samsung account end user agreement and privacy policy. Otherwise, you cannot create a Samsung account. You can view the entire content of the agreement by navigating to Smart Hub > Samsung Account > Terms and Conditions, Privacy Policy.
- Alternatively, you can create a Samsung account at http://content.samsung.com. You can use one ID for both the TV and the website.

Creating a Samsung Account using Sign Up Samsung Account Menu

- Navigate to Smart Hub > Samsung Account > Create Account and select Create Samsung Account.
- 2. Agree to use a Samsung account and select Next.
- 3. Create a Samsung account according to the instructions on the Create Account screen.
- 4. Once a Samsung account is created, you are automatically logged in to Smart Hub.

Creating a Samsung Account using a Facebook Account

A Facebook user can easily obtain necessary information from Facebook and create a Samsung account.

- 1. Navigate to Smart Hub > Samsung Account and select Log In. The Sign In screen appears.
- 2. Select + and select the Create with Facebook on the Sign In screen.
- 3. Enter your Facebook ID and password and select Sign In.
- 4. Agree to use a Samsung account and select Next.
- 5. Create a Samsung account according to the instructions on the Create Account screen.
- 6. Once a Samsung account is created, you are automatically signed in.
 - If you create a Samsung account using your Facebook account, they are automatically linked.

Signing in to a Samsung Account

MENU > Smart Hub > Samsung Account > Log In

Logging Into and Saving a Samsung Account on the TV

- 1. Navigate to Smart Hub > Samsung Account and select Log In.
- 2. Select + and select Sign In on the Sign In screen,
 - If you save your Samsung account on the TV, you can easily sign up later on.
- 3. Enter your ID and password and then select Sign In.
 - Check the Sign me in automatically option if you wish to log into Smart Hub automatically.
 - If you forgot your password, select **Reset Password** to receive the password resetting instructions via email.
- 4. Agree to use a Samsung Account and select Next.
- 5. Select an image to be used as the profile picture.
- 6. The Samsung account has been saved on the TV. Select Done to log into your Samsung account.

Easily Logging Into Your Samsung Account Saved on the TV

- 1. Navigate to Smart Hub > Samsung Account and select Log In.
- 2. Choose your Samsung account on the Sign In and select Sign In.
- Using the login method configured for the selected Samsung account, log into your Samsung account. To change the login method, refer to the "Changing and Adding Information to Samsung Account" section.

Linking Your Samsung Account to External Service Accounts

MENU > Smart Hub > Samsung Account > Link Service Accounts

Linking your Samsung account to an app account of the app installed on the TV lets you automatically log into your linked app accounts when you log into your Samsung account. For example, you can download the Facebook app and link your Facebook account to your Samsung account. In this case, logging into your Samsung account then automatically logs you into your Facebook account as well.

To use Link Service Accounts, you must first log into your Samsung account.

Linking a Service Account

- 1. Navigate to Smart Hub > Samsung Account and select Link Service Accounts. The available apps that can be linked to your Samsung account are listed.
- 2. Select an app from the list. The Link to other accounts window appears on the screen.
- 3. Enter the current ID and password of the app to log in and select OK.
- 4. When the login is complete, the app account is linked to the Samsung account.

Disconnecting a Linked Account

- Navigate to Smart Hub > Samsung Account, select Link Service Accounts. Select an app to unlink.
- 2. A confirmation dialog box appears. Select Yes to unlink the app.

Changing and Adding Information to Samsung Account

MENU > Smart Hub > Samsung Account

Using the Samsung Account menu, you can manage your Samsung account,

- To change the account information, you must be logged into your Samsung account.
- 1. Navigate to Smart Hub > Samsung Account and select Edit Profile. The keyboard appears.
- 2. Enter your password, and then select **Done**. The **Edit Profile** screen appears.

The **Edit Profile** screen lets you do the following:

Changing Profile Picture

If you select Edit Profile Picture on the login screen, you can change the profile image.

Choosing a Samsung Account Login Method for TV

Select Sign-in Method on the login screen and choose a login method. You can determine how to log into the TV with the saved Samsung account.

Turn Auto Login On or Off

Select Sign me in automatically from the login screen and select the checkbox. Then, you are automatically logged into the TV with your Samsung account when the TV is turned on.

• Entering Basic User Information

You can enter your given name, surname, and date of birth.

Add a Credit Card to Your Samsung Account

Select Add Card to add a credit card to your Samsung Account. Adding a credit card to your account makes it easier to purchase online movies and TV shows. Follow the easy directions on the screen.

Setting Newsletter Subscription


You can determine whether to subscribe to the newsletter containing the latest information.

Deleting All Samsung Accounts from the TV

MENU > Smart Hub > Samsung Account > Remove Accounts from TV

Navigate to Smart Hub > Samsung Account and select Remove Accounts from TV. The account and password information saved on the TV is deleted, and the account information of any linked apps are also deleted.

Using the SAMSUNG APPS Panel

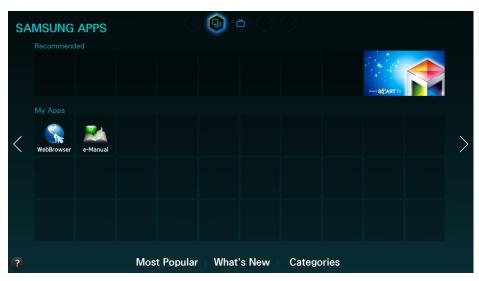

The screen shown may vary depending on the model.

Smart Hub offers a variety of free news, sports, weather, and gaming content you can directly install and enjoy on your TV as you do on your smartphone or tablet.

- Before you use **SAMSUNG APPS**, check if the TV is connected to the Internet. Your TV must be connected to the Internet in order to use **SAMSUNG APPS**.
- When the Smart Hub is launched for the first time, the default apps are automatically installed. The default apps may differ depending on the region.

Using Supported Features via the Pop-Up Menu - Downloaded Apps

Move the focus to an app in the second row or below, and then press and hold the 🕒 button. The Tools menu appears displaying the following functions.

Move

Lets you relocate an app on the screen.

Delete

Lets you remove a selected app from your TV.

Multi Delete

Lets you remove multiple apps from the TV.

View Details

Displays detailed information about a selected app.

Change View

You can change view mode sort by Custom or Most Played.

Lock/Unlock

You can lock or unlock a selected app from the screen.

Update apps

Displays a list of apps that have updates available. You can select which apps to update.

Installing an App

- When the TV's internal memory is insufficient, you can install an app on a USB device.
- You can view icons for the apps saved on the USB device on the **SAMSUNG APPS** screen only when the device is connected to the TV. You can use an app installed on a USB device only when the USB device is connected to the TV. If the USB device is disconnected while the app is running, the app is terminated.
- You can use the app installed on the USB device on another PC or TV.

Quick Installation

- 1. On the SAMSUNG APPS screen, select Most Popular, What's New, or Categories.
 - The Most Popular and What's New show the most popular and new Samsung Apps. To view the entire app list, select Categories. You can view all Samsung Apps classified by genre.
- 2. Move the focus to an app, and then press and hold the 🕒 button. A pop-up menu appears.
- On the pop-up menu, select Download.
 - Most apps are free to install.
 - While an app is being installed, the progress bar appears so that you can easily figure out the installation progress.
- 4. The selected app is installed on the TV.
 - You can view installed apps on the SAMSUNG APPS screen,

Installing an App in the Detailed App Information Screen

- 1. On the SAMSUNG APPS screen, select Most Popular, What's New, or Categories.
 - The Most Popular and What's New show the most popular and new Samsung Apps. To view the entire app list, select Categories. You can view all Samsung Apps classified by genre.
- 2. Select an app from the list. Detailed information about your selection appears on the screen.
- 3. Select Download on the detailed information screen to install the selected app on the TV.
 - Most apps are free to install,
 - While an app is being installed, the progress bar appears so that you can easily figure out the installation progress.
- When the installation is complete, the Download button turns to Open.
 - You can view installed apps on the **SAMSUNG APPS** screen.

Launching an App

Select an app on the SAMSUNG APPS screen to launch it.

The icons indicate the following:

• III: The app is installed on a USB device.

Default Apps

e-Manual

The embedded e-manual contains information about your TV's key features.

Web Browser

Web Browser is an Internet browsing app. Using Web Browser, you can surf the Internet on the TV in the same manner as you would using a PC even while watching a TV program on PIP. Use a keyboard and mouse for a more convenient web browsing experience,

The browsing page may differ from that on a PC.

Rearranging Apps on the SAMSUNG APPS Screen

- 1. On the SAMSUNG APPS screen, move to the app you wish to change the order,
- 2. Press and hold the 🗗 button. A pop-up menu appears.
- 3. On the pop-up menu select Move.
- 4. Move an app to a desired location and select the app again,

Deleting an App from the TV

If an app is deleted, the data related to the app is also deleted.

Deleting an App

- 1. On the SAMSUNG APPS screen, move to the app you wish to remove.
- 2. Press and hold the 🕒 button. A pop-up menu appears.
- 3. On the pop-up select **Delete**. A removal confirmation window appears.
- 4. Select Yes. The selected app is removed.

Removing Multiple Apps

- 1. On the SAMSUNG APPS screen, move to the app you wish to remove.
- 2. Press and hold the 🕒 button. A pop-up menu appears.
- 3. On the pop-up select Multi Delete, A check box appears on the app icons.
- Select all the apps you wish to remove and then select Delete. A removal confirmation window appears.
- 5. Select Yes. The selected app is removed.

Rating/Reviewing an App

On the detailed app information screen, you can rate the app or send a review to the app developer.

To rate or review an app, you must log into your Samsung account. You can only rate or review with a TV purchasing apps and games.

Updating an App

- 1. On the **SAMSUNG APPS** screen, move to the app you wish to update.
- 2. Press and hold the 🕒 button. A pop-up menu appears.
- 3. On the pop-up select **Update apps**. A pop-up window appears.
- 4. Select all the apps you wish to update and then select **Update**. All the selected apps are updated to the latest version.

Setting Auto App Update

To update apps automatically, navigate to Smart Hub > Apps Settings and set Auto Update to On. The apps will then be updated automatically when an update becomes available.

SAMSUNG APPS Features

MENU > Smart Hub > Apps Settings (Try Now)

You can configure the features related to the apps installed on your TV.

Setting Push Notification

The Push notification function enables apps installed on the TV to send alarm messages notifying users of news, messages, etc.

- Navigate to Smart Hub > Apps Settings > Push Notification Settings and set the Push Notification to On.
- 2. Set the desired apps below the **Push Notification** to **On** to allow them to send push notifications. The push notification of the selected app is activated.
 - The **Push Notification** app list only the apps that supports **Push Notification Settings** from among the apps installed on the TV.

Using an App while Watching TV

If an app linked to a channel is installed on the TV, you can view the program information and use the related service through the app while watching TV.

Navigate to Smart Hub > Apps Settings and set Channel-Bound Apps to On.

You can use this feature only when an app supporting Channel-Bound Apps is installed on the TV.

Using the On TV Panel



- The screen shown may vary depending on the model.
- Availability depends on the specific area.

If you move to the On TV panel in the Smart Hub, you can view the program list of the channels recommended by Smart Hub while you are watching a program.

- Before you use On TV, check if the TV is connected to the Internet. The TV must be connected to the Internet in order to use On TV.
- The channels or programs recommended by **On TV** may differ from the actual ones depending on the broadcast information provider,

Select a desired program from the recommendation list. If the selected program is being broadcasted, you can immediately watch the channel and, if the program is to be broadcasted, you can move to the detailed program information screen.

Select n from the screen to change the recommended content list.

For a program being broadcasted, a progress bar appears. For an upcoming program, the remaining time to broadcast appears.

You can use the following features by selecting the buttons at the bottom of the screen.

Viewing the Program Schedule of Digital Channels

Select Guide at the screen to view the program schedule of each digital channel at a glance. You can check the program schedule and even set up a Schedule Viewing. For more information about Guide, refer to the "Using the Guide" section.

The Guide provides information only about digital channels. Analog channels are not supported.

Program Recommendations by Time

Select Timeline View at the screen to view program recommendations for different times of the day.

Popular Videos

Select **Trending** at the bottom of the screen to see what is the most trendy or popular content on Twitter, and then set up a Schedule Viewing to view or record that content.

Using Supported Features via the Pop-Up Menu

Move the focus to a desired program, and then press and hold the desired program are available:

Available options may differ depending on the selected program.

Viewing Detailed Information

Lets you view detailed information about the program you selected.

Reserving

Lets you set up a Scheduled Viewing for the program you selected.

Viewing Detailed Program Information

- 1. Move the focus to a desired program, and then press and hold the 🗗 button. The options menu appears.
- 2. In the Options menu, select View details. Detailed information about the selected program screen appears.

Select a program from the list to see more information about the program and to access the following options:

Moving to a Channel

Jump to the selected program's channel.

Reserving

Set up a Schedule Viewing for the program.

This function is only available for programs that are to be broadcasted.

Viewing Related Content

View a list of content related to the program. If you select an item from the list, the detailed screen of the selected item appears.

Rate

You can rate the program.

Sharing

You can choose to like or dislike a selected program or share information about the selected program via an SNS.

Configuring On TV Settings

MENU > Smart Hub > On TV Settings > Set Up Service Provider

You can set up the signal reception method, cable company, and other broadcast viewing environment settings for On TV.

Navigate to Smart Hub > On TV Settings, select Set Up Service Provider and set up the broadcast viewing environment settings according to the onscreen instructions.

Receiving Recommended Content Notification

You can configure the TV to display a notification when a frequently watched program is broadcasted. Navigate to Smart Hub > On TV Settings and set Automatic Notifications to On.

Changing Recommendation Type

You can choose between personally preferred programs and programs preferred by the general public as the type of recommendations you wish to receive.

Navigate to Smart Hub > On TV Settings, select Recommendation Type and set it to a desired type.

Removing Adult Content from the Recommended List

You can configure this setting so that recommended programs that are rated for adults are blocked automatically.

Navigate to Smart Hub > On TV Settings and set Block Adult Content to On.

Using the Multimedia (Playing Photos, Videos, and Music)

- However, you cannot play media content if the content is not supported by the TV. For more information, refer to "Read Before Playing Photo, Video, or Music Files".
- Backup important files before connecting a USB device. Samsung is not responsible for damaged or lost files

Playing Media Content Saved on a USB Device

- 1. The USB devices connected to the TV are listed.
- 2. Select the device you want to connect to. The folders and files in the selected USB are listed.
- 3. Select the media content you want to play from the list. The media content plays.
 - Alternatively, navigate to the media content you want to play, and then ▶ button to play the content.
- If you connect a USB device to the TV while watching the TV, a pop-up window appears on the screen so that you can easily navigate the folders and files of the USB device.
- Alternatively, if you select a USB device on the **Source** screen, a pop-up window appears on the screen so you can easily navigate the folders and files of the USB device.

Safely Removing a USB Device

- 1. Press the **SOURCE** button, The Source screen appears.
- 2. Navigate to the USB device you want to remove. Press and hold the distribution on a standard remote. An options window appears.
- 3. Select Remove USB in the list,

Buttons and Functions Available While Viewing Photos

The TV displays the buttons below when you press the displays the button while viewing photos from a multimedia source. The playback buttons will disappear if the RETURN button is pressed.

• Pause / Play

Start or stop the slideshow, Using slideshow, you can play all the photos in a folder one by one.

Previous / Next

View the previous or the next photo.

Settings

The following functions are available when you select the Settings button.

Function	Description
Slideshow Settings	Speed: Set the slideshow speed. Effects: Apply transition effects for the slide show.
Rotate	Rotate the photo.
Zoom	Zoom in by up to a factor of 4.
Picture Mode	Change the Picture Mode setting.
Background Music	Listen to background music while viewing photos. The music file must be saved in the same device as the photo file. When background music plays, the mini player appears on the screen. Using the mini player, you can pause the current music or play another music file.
Sound Mode	Change the Sound Mode setting. This option is supported only when background music is playing.
Select Speakers	Choose a speaker to play the background music.
Send	This function is the same as the 'Copy' function of a computer. Using this function, you can send the current photo to another storage device. For the supported storage devices for this feature, refer to "Sending Files between Storage Devices Table".
Information	View detailed information about the current photo.

Buttons and Functions Available While Viewing Videos

The TV displays the buttons below when you press the displays the button while viewing videos from a multimedia source. The playback buttons will disappear if the RETURN button is pressed.

• Pause / Play

Pause or play the video.

When the video is paused, you can use the following functions. However, audio will not be heard while the video is paused.

- Step: Whenever you press the u button, it scans the paused video one frame at a time.
- Slow Motion: Select the ➤ button to play the video in slow playback speed (1/8, 1/4, 1/2).

Rewind / Fast Forward

Rewind or fast forward the video. Repeatedly select the button to make the rewind/fast forward speed faster by up to 3 times. To restore normal playback speed, select >.

Previous / Next

Select the ⋈ button twice to play the previous video. Selecting ⋈ once reloads the current video from the beginning.

To play the next video, select the ▶ button.

Settings

The following functions are available when you select the Settings button.

Function	Description
Select Scene	Thumbnails: Select a scene and play the video from the scene. Thumbnails is not available when 1) the thumbnail of the video is not extracted yet, 2) the video contains audio only or 3) the video play time is shorter than 10 seconds. Chapter Titles: Select and play another video in the same folder. Time Bar: You can use ◀ or ▶ to scan through the file in 10-seconds intervals or enter a specific time value to jump to that point in the video.
Subtitle	Control the subtitles of the video. Language: Turn the subtitles on or off. Sync: When the video and the subtitles are not synchronized, you can adjust the synchronization. Reset Sync: Reset the subtitle synchronization adjustment to 0. Size: Choose the font size for the subtitles. Encoding: If the subtitles are broken, you can change the encoding language.
Repeat	Set the repeat mode. Repeat One repeats the current program only. Repeat All repeats all programs contained in the folder.
Picture Size	Change the picture size. However, the supported picture size is determined by the video content.
Picture Mode	Change the Picture Mode setting.
Sound Mode	Change the Sound Mode setting.
Select Speakers	Choose a speaker to play the audio.
Audio Language	Choose a desired audio language. This option works only when the video supports multi-track sound.
Information	View detailed information about the video.

Buttons and Functions Available While Playing Music

The TV displays the buttons below when you press the displaying music files from a multimedia source. The playback buttons will disappear if the RETURN button is pressed.

• Pause / Play

Pause or resume the music.

Rewind / Fast Forward

You can rewind or fast forward the music in 3 steps. To restore normal playback speed, select >.

Previous / Next

Select the we button twice to play the previous music file. Selecting we once reloads the current music file from the beginning.

To play the next music file, select the >> button.

Repeat

Set the repeat mode. Repeat One repeats the current music file only. Repeat All repeats all music files contained in the folder.

Shuffle

Play the music files in order or randomly.

Select Speakers

Choose a speaker to play the audio.

Sound Mode

Change the Sound Mode setting.

Functions on the Media Content List Screen

On the media content list screen of a storage device, the following functions are provided.

Filter

You can view only one type of content - photo, video, or music - saved on a storage device.

Options

The following options are available when you select the Options button.

This function is not available when Filter is set to All.

Function	Description
Slide Show	Start the slide show. You can use this function when the media content type is photo.
Play Selected	Play only content you want from the media content list.
Send	This function is the same as the 'Copy' function of a computer. Using this function, you can send the media content to another storage device. For the supported storage devices for this feature, refer to "Sending Files between Storage Devices Table".
Encoding	If the media content title is broken, you can change the encoding language. This function is available only when the media content is music.
Delete Playlist	Delete a playlist that you have created. This function is available only when the media content is music.
Add to Playlist	Add a file to a playlist that you have created or create a new playlist. This function is available only when the media content is music.

Digital Broadcast Information at a Glance

MENU > Broadcasting > Guide (Try Now) (Try Now)

The Guide provides an overview of each digital channel's program lineup. You can check the program schedules and set up a Schedule Viewing.

Press the GUIDE button on the remote to launch the Guide.

The information in the **Guide** is for digital channels only. Analog channels are not supported.

Using the Guide

To access the Guide functions, press and hold the touch pad. A pop-up window listing the following functions appears.

Changing the Channel List

If you select Channel Filter, you can change the channels displayed in the channel lists.

Navigating the Program Schedule

Press the ≪ or ➤ button to navigate the program schedule by 2 hours. You can only view the future program schedule.

It is available for moving the page using the ▲ or ▼ button.

Moving to the Schedule Manager

You can move to the Schedule Manager screen.

Adding Favorites

Select Edit Favorite Channels to add the selected program to the Favorites.

Viewing Detailed Information

View detailed information about the selected program. The program information may vary depending on the type of incoming signal and may not be available at all for certain programs.

- Select a current program on another channel and select View Details to Watch the program.
- Select an upcoming program and select View Details for Schedule Viewing.

Checking the Current Program Info

While watching TV, select INFO using the remote to view information about the current program.

- To view the program info, you must first set the TV's clock, Go to Clock (System > Time > Clock).
- The program information may vary depending on the type of incoming signal and may not be available at all for certain programs.

Select the current program in the Program Info window to instantly record the program. Press the ◀ or ▶ buttons, you can view the upcoming programs. If you select a desired program you can set the Schedule Viewing for the program.

For more information on Schedule Viewing, refer to "Setting Up a Schedule Viewing",

Changing the broadcast signal

MENU > Broadcasting > Antenna (Try Now)

You can choose the appropriate DTV mode for your viewing environment. Choose Air or Cable. Air is suitable for homes equipped with a separate, over-the-air antenna. Cable is suitable for homes that have subscribed to a local cable-service or satellite-service provider.

Do not use this function if your TV is connected to a cable or satellite box.

Digital Channel Signal Info and Strength

MENU > Support > Self Diagnosis > Signal Information (Try Now)

Select Support > Self Diagnosis > Signal Information. Displays the digital channel's signal information and strength.

- If your TV is attached to a separate, over-the-air antenna, you can use the signal strength information to adjust the antenna for increased signal strength and improved HD channel reception.
- Signal information is only available for digital channels.

Setting Up a Schedule Viewing

Configure the TV to show a specific channel or program at a specific time and date. The bicon appears next to programs that have been configured for a Schedule Viewing.

To set up a Schedule Viewing, you must first set the TV's clock. Go to Clock (System > Time > Clock).

Setting Up Schedule Viewing

Digital Channel Schedule Viewing

You can set up Schedule Viewing for programs on digital channels on the following screens:

- The Guide Screen
 - Select an upcoming program from the Guide to set up a Schedule Viewing for it.
- The Program Info Screen

Press the INFO button to display information about the current program. From the program information screen, select right button to view information about the next program, and press enter, to set up a **Schedule Viewing** for the upcoming program.

Analog Channel Schedule Viewing

MENU > Broadcasting > Schedule Manager (Try Now)

The **Schedule Viewing** function for programs on analog channels can be set up by specifying the time and date.

- 1. Select Broadcasting > Schedule Manager.
- Select Schedule from the Schedule Manager to bring up a pop-up menu. Select Schedule Viewing.
- 3. Specify the Antenna, Channel, Repeat, and Start Time options for the program you want to watch and then select OK to finish.

Managing the Schedule Viewing List

MENU > Broadcasting > Schedule Manager

You can change the settings of Schedule Viewing sessions or cancel scheduled sessions altogether,

Deleting Schedule Viewing Sessions

You can delete Schedule Viewing sessions.

- 1. Select Broadcasting > Schedule Manager.
- 2. Select a session from the Schedule Manager, A pop-up window appears.
- 3. Select **Delete**. This cancels the selected viewing session.

Editing Schedule Viewing Sessions

- You can change the settings of Schedule Viewing sessions, Select Broadcasting > Schedule Manager.
- 2. Select a session from the Schedule Manager. A pop-up window appears.
- 3. Select Edit and change the settings of the selected session.
- 4. Once finished, select OK. This applies the changes you made to the selected viewing session.

Using the Channel List

MENU > Broadcasting > Channel List (Try Now)

Press the CH LIST button while watching TV to bring up the Channel List and change the channel or check programs on other digital channels.

Select a channel from the **Channel List** to jump to it right away. To quickly scroll through the list, use the channel up/down buttons. This moves the focus one page at a time.

The Channel List screen contains the following icons:

An analog channel

A favorite channel

A locked channel

Using Options

Press the ◀ button, and then select Options. The following options are available:

Function	Description
Antenna	Choose Air or Cable as the DTV mode. Air is suitable for homes equipped with separate, over-the-air. Cable is suitable for homes that subscribe to a local cable-service or satellite-service provider.
Genre	Sort the list so that it includes channels of a selected genre only. You can only use Genre if you have set the channel mode in the Channel List to Added Ch, and only if the added channels contain genre information.
Edit Favorites	Designate favorite channels. Refer to the "Creating a Personal Favorites List" section for more information.

Viewing the Added Channels or Favorites Lists

Press the button, and then select Added Ch. or Favorites. Favorites will only appear if you have registered at least one favorite channel. For more information, refer to "Creating a Personal Favorites List".

Registering, Removing, and Editing Channels

MENU > Broadcasting > Edit Channel Try Now

Remove channels from the index of channels, restore removed channels, and rename analog channels. The **Edit Channel** screen icons indicate the following:

• An analog channel

A favorite channel

A locked channel

Registering and Removing Channels

MENU > Broadcasting > Edit Channel

Removing Registered Channels

Remove registered channels from the index.

- 1. Select the channels you want to remove. Unselect channels by choosing them again. To select all the channels, select **Options** and then select **Select All** from the list.
- Once you have made your selection, select Delete from the left of the screen to remove the selected channels.

Adding Back Removed Channels

You restore channels to the index of channels by adding them back. Removed channels are displayed in gray in the All list only. In addition, the Add option is only available for removed channels.

- 1. Select Options to display a list of options. Select Category from the list, and then select All.
- 2. From the All list, select the channels you wish to restore. Unselect channels by choosing them again. To select all the channels, select Options and then select Select All from the list.
- 3. Once you have made your selection, select Add to restore the channels,

Editing Registered Channels

MENU > Broadcasting > Edit Channel

Select **Options** at the bottom left of the screen to access the following options. The available options may vary depending on the broadcast signal.

Select All

Selects all channels displayed the Edit Channel screen.

Antenna

Choose Air or Cable as the DTV mode.

Availability depends on the specific area.

Category

Channels stored in the TV are grouped into the following categories: All and Added Ch.,

Edit Favorites

Designate favorite channels. For more information, refer to "Creating a Personal Favorites List".

Rename Channel

Rename analog channels. The new name can be up to 5 characters long.

Information

View detailed information about the current program.

Program Rating Lock

MENU > Broadcasting > Program Rating Lock

The Program Rating Lock blocks programs with ratings higher than those desired. This is useful for controlling what children watch on TV. This will not function for programs originating from external sources, such as DVD players or USB files.

This PIN is required to watch a blocked program.

The **Program Rating Lock** is available only in TV mode.

Creating a Personal Favorites List

MENU > Broadcasting > Edit Favorites (Try Now)

You can designate frequently watched channels as favorite channels. Favorite channels are highlighted in the **Edit Channel** and **Channel List** screens with the symbol. You can create up to 5 favorite channel lists.

Registering Channels as a Favorites

MENU > Broadcasting > Edit Favorites

Registering the Current Channel as a Favorites

Add the current channel to a Favorites list.

- 1. While watching a TV channel, press the TOOLS button. Select Edit Favorites from the list.
- 2. From the pop-up window, select all the Favorites lists you want to add the current channel to and then select **OK**.
- 3. This adds the current channel to the selected Favorites list(s). Select OK.

Registering Multiple Channels as Favorites

It's possible to register multiple channels as favorites at the same time.

- 1. Select Broadcasting > Edit Favorites.
- 2. Select the channels from the list in the middle of the screen.
- 3. Select Change Fav. and then change the Favorites list on the right side of the screen to the Favorites list you want to use.
- 4. Select Add on the screen. The TV adds the channels you selected to the Favorites list you chose.

Viewing Favorites List Channels Only

It's possible to flip through Favorites list channels using only the channel up/down buttons.

- A Favorites list can only be selected if it contains at least one favorite channel.
- 1. Run Channel List, (Broadcasting > Channel List),
- 2. Press the ▶ button to select Favorites 1 through Favorites 5.
- Choose a channel from the selected Favorites list. This changes the channels and Channel List changes to the selected Favorites channel.

Editing a Favorites List

MENU > Broadcasting > Edit Favorites

You can rename and edit Favorites lists.

Edit Favorites Screen Menu Items

Select Options on the Edit Favorites screen to access the following options:

Copy to Favorites

Copy channels from one favorite channels list to another. Refer to the "Copying a Favorites List to a Different Favorites List" section for more information.

You can use Copy to Favorites only if you have registered one or more channels to at least one Favorites list.

Rename Favorites

Rename an existing favorite channels list. Refer to the "Renaming a Favorites List" section for more information.

You can use Rename only if you have registered one or more channels to at least one Favorites list.

Antenna

Choose between Air and Cable.

Edit Channel

Lets you manage the channels saved on the TV. For more information, refer to "Registering, Removing, and Editing Channels".

Information

View detailed information about the current program.

Removing Registered Channels from a Favorites List

Remove channels from the favorites list.

- 1. Select Change Fav. at the bottom of the screen and then change the Favorites list to the Favorites list you want to use.
- 2. Select the channels you want to remove from the selected Favorites list.
- 3. Select Delete.

Rearranging a Favorites List

Rearrange the order of the channels in a Favorites Channels List,

- 1. Select Change Fav. at the bottom of the screen and then change the Favorites list to the Favorites list you want to use.
- 2. From the selected Favorites list, select the channels you want to rearrange.
- 3. Select Change order from the bottom of the screen and then rearrange the selected channels. Press enter to finish,

Renaming a Favorites List

Rename an existing favorites channels list.

- 1. Select Change Fav. at the bottom of the screen and then change the Favorites list to the Favorites list you want to use.
- 2. From the selected Favorites list, select the channels you want to rename.
- Select Options. A list appears.
- Select Rename Favorites from the list. A pop-up window appears. Rename the list in the pop-up window. The new name can be up to 20 characters long.

Copying a Favorites List to a Different Favorites List

Copy channels from one favorites channels list to another.

- 1. Select Change Fav. and then change the Favorites list on the side of the screen to the Favorites list you want to use.
- 2. From the Favorites list displayed on the side of the screen, select all the channels you want to copy.
- 3. Select Options. A list appears.
- 4. Select Copy to Favorites from the list, A pop-up window appears,
- 5. From the pop-up window that appears on the screen, select the Favorites lists you want to copy the selected channels to. This copies the selected channels to the selected Favorites lists.
 - Copy to Favorites is only available when there are channels in the Favorites list.

Watching a Sports Game Realistically (Soccer Mode)

MENU > System > Soccer Mode > Soccer Mode

Go to System > Soccer Mode and then set Soccer Mode to On. The picture and sound modes of the TV are automatically optimized for sports events.

- Enabling Soccer Mode changes the Picture Mode to Stadium and the Sound Mode to Stadium, and disables some Picture and Sound menus.
- Press the TOOLS button to turn Soccer Mode on or off,

TV-Viewing Support Features

Showing Captions

MENU > System > Accessibility > Caption (Try Now)

You can watch TV broadcasts with captions.

Even if enabled, captions will not be displayed by programs that do not support captions.

Enabling Captions Try Now

Select System > Accessibility > Caption > Caption

The TV cannot control or modify DVD or Blu-ray subtitles. To control DVD or Blu-ray subtitles, use the subtitle feature of the DVD or Blu-ray player and the player's remote control.

Selecting the Caption Mode (Try Now

Select System > Accessibility > Caption > Caption Mode to display a list of subtitle modes. Select a subtitle mode. The list of modes may vary depending on the broadcast.

Default / CC1 ~ CC4 / Text1 ~ Text4

(Analog channels only) The analog caption function operates in either analog TV channel mode or when a signal is supplied from an external device to the TV. (Depending on the broadcasting signal, the analog caption function may or may not work with digital channels.)

PIP Broadcast Viewing

MENU > Picture > PIP (Try Now)

Use the PIP ("Picture-In-Picture") function to watch TV in a small window while also watching content from a DVD player, Blu-ray player, computer, or a different external device in the background.

Select Picture > PIP to display the PIP settings screen. The PIP settings screen contains the following options:

PIP

Activates/deactivates PIP.

Antenna

Choose Air or Cable as the digital channel method.

Channel

Select the PIP sub-picture channel.

Size

Select the PIP sub-picture size.

Position

Select the PIP sub-picture position.

Sound Select

Select the audio source.

Choose a broadcast.

- You cannot use PIP while using **Smart Hub** or the **3D** function. (Corresponding for countries or models supporting 3D.)
- Turning off the TV automatically disables PIP.
- Playing a game or using the karaoke feature on the main screen can result in lower PIP picture quality.
- For PIP to work, the main screen's source must be Component or HDMI and the input resolution must be less Full HD (FHD 1080p). The subscreen supports digital channels only.

Scanning for Available Channels

MENU > Broadcasting > Auto Program (Try Now)

Automatically scans and indexes all channels received through the TV's antenna input connector,

- Do not use this function if your TV is connected to a cable or satellite box.
- If the TV has saved channels, Auto Program deletes the existing list, and then saves the newly scanned channels.
- 1. Select Broadcasting > Auto Program.
- 2. Select **Start** when prompted. This initiates the Auto Program function. The process can take up to 30 minutes to complete.

Selecting the Broadcast Audio Options

MENU > Broadcasting > Audio Options (ry Now)

Configure the program's audio language. Audio Options functions differently for analog and digital channels.

Press the INFO button to view the current broadcast's audio signal information.

Digital Broadcast Audio Options

Audio Language (Try Now)

Select Audio Options > Audio Language and then choose a language. Digital broadcasts contain audio signals in multiple languages. Digital programs that include the language you selected in Audio Language are automatically played using that language. If the language you selected is not supported by the broadcast signal, the TV will use the default audio language broadcast by the TV station.

Analog Broadcast Audio Options

Multi-Track Sound (Try Now)

Select Audio Options > Multi-Track Sound. Configure the audio for the current broadcast. Multi-Track Sound can be set to mono or stereo, depending on the broadcast signal or program. However, this option is automatically set to mono if the broadcast signal or program does not support stereo.

- Press the INFO button to view the current broadcast's audio signal information,
- While watching TV, press the TOOLS button, and then select Multi-Track Sound.

Fine-Tuning the Screen

MENU > Broadcasting > Channel Settings > Fine Tune (Try Now)

Available for analog broadcasts only.

Analog pictures can become shaky and full of noise. If this happens, you can fine-tune the signal and/or reduce noise to clear up the picture.

- 1. Select Broadcasting > Channel Settings > Fine Tune. An adjustment bar appears on the screen.
- Press the ◀ or ▶ button to make adjustments. Select Save or Close to apply the new setting.
 Select Reset to reset the Fine-Tune operation.

Color System

MENU > Broadcasting > Channel Settings > Color System (Try Now)

Available for analog broadcasts only.

Normally the TV can receive image and sound with good quality when in the mode auto. This mode detects the signal color system automatically. In case of some signal reception with color unsatisfactory, select the Color System mode to PAL-M, PAL-N or NTSC.

Changing the Picture Mode and Adjusting the Picture Quality

Choosing the Right Picture Mode for the Viewing Environment

MENU > Picture > Picture Mode (Try Now)

The following picture modes utilize different contrast and brightness settings to provide the best viewing experience for the environment.

Navigate to Edit Name, if you use the PC setting for PC or DVI PC, you can only available Standard and Entertain.

Dynamic

If the ambient lighting is too bright and makes the screen blurry, use this mode to make the picture clearer.

Standard

This is the default mode suitable for most environments.

Natural

This mode is useful for reducing eye strain.

Availability depends on the specific model.

Movie

Appropriate for darkened rooms, for watching movies, and when experiencing eye fatigue. Darkens the screen and reduces glare.

Entertain

Sharpens images for a more dynamic viewing experience.

This mode is only available when you use a PC setting for PC or DVI PC on Edit Name.

Adjusting the Picture Quality for Each Picture Mode

MENU > Picture

Select one of the settings below from the **Picture** menu to display the slide bar for the selected setting. Adjust the value by pressing the ◀ or ▶ arrow button on your remote. Choose a different setting by pressing the ▲ or ▼ button. Adjusted values are applied to the current source and picture mode.

The Color and Tint (G/R) settings cannot be adjusted when the TV is connected to a computer via an HDMI to DVI cable.

Choose a Picture Mode - Dynamic, Standard, Natural, Movie - and then adjust the settings.

Backlight (Try Now)

Adjusts the brightness of individual pixels. Decreasing the brightness reduces power consumption.

Contrast (Try Now)

Adjusts the screen contrast,

Brightness (Try Now)

Adjusts the overall brightness.

Sharpness (Try Now)

Sharpens or dulls the edges of objects.

Color (Try Now)

Adjusts the overall color saturation.

Tint (G/R) (Try Now)

Adjusts the ratio of green to red. Increase the green value to saturate the greens and the red value to saturate the reds.

Adjusted values are saved by the TV for the current source and picture mode, and remain in effect each time the source and picture mode is selected. Consequently, the TV can have different picture settings for each external source.

Applying the Current Picture Settings to Other Input Sources

MENU > Picture > Apply Picture Mode (Try Now)

You can apply the picture quality setting that you configured for the TV to all external devices connected to the TV or to the current source only.

To apply the setting to all external devices connected to the TV, select **All Sources**. To apply the setting to the current input only, select **Current Source**.

Fine-Tuning Each Picture Mode (Advanced Settings)

MENU > Picture > Advanced Settings (Try Now)

Select Picture > Advanced Settings to fine-tune how images are displayed on the TV screen for each Picture Mode.

- Advanced Settings is only available when the Picture Mode is set to Standard or Movie.
- When the TV is connected to a computer via an HDMI-DVI cable, only White Balance and Gamma can be adjusted.

Choose a Picture Mode and then adjust the settings.

Dynamic Contrast (Try Now)

Automatically adjusts the screen contrast. Use this option to achieve the optimal contrast setting.

Black Tone (Try Now)

Adjusts the black color depth.

Flesh Tone (Try Now)

Darkens or lightens skin tones,

RGB Only Mode Try Now

Adjusts the red, green, and blue levels individually.

Color Space (Try Now)

Adjusts the range of colors (the color space) that the TV can display. Auto automatically adjusts the color space depending on the input signal. Native applies a range that is wider than the input signal. Custom allows you to adjust the color space manually.

The availability of **Custom** depends on the specific model.

• White Balance (Try Now)

- For the LED 4, 5 series models

You can adjust the color temperature of the picture to make white objects look white, and the overall picture appear natural. You can adjust each of the 3 color's luminosity with the offset menu and the brightness with the gain menu. To restore the default values, select **Reset**.

- For the LED 6 series models

You can adjust the color temperature of the picture to make white objects look white, and the overall picture appear natural.

2 Point: Lets you adjust red, green, and blue luminosity with the offset menu and brightness with the gain menu. To restore the default values, select **Reset**.

10 Point: Divides red, green, and blue into 10 sections each, and lets you modify the white balance by adjusting the brightness of each section. Select the section to adjust in the Level field.

You can use the **10 Point** function only when the **Picture Mode** is set to **Movie**. Some external devices may not support the function.

Gamma (Try Now)

Adjusts the primary color intensity,

Motion Lighting (Try Now)

Adjusts the brightness in response to on-screen movements to reduce power consumption,

- This feature is only available when the **Picture Mode** is set to **Standard** and is not available in 3D mode. (Corresponding for countries or models supporting 3D.)
- Adjusting the Contrast, Brightness, and other picture quality settings deactivates Motion Lighting.

Adjusting the Picture for Easier Viewing (Picture Options)

MENU > Picture > Picture Options (Try Now)

Select Picture > Picture Options to make additional adjustments for an easier viewing experience.

When the TV is connected to a computer via an HDMI-DVI cable, only Color Tone can be adjusted.

Choose a Picture Mode and then adjust the settings.

Color Tone (Try Now)

Adjusts the color tone. The setting is applied on an individual **Picture Mode** basis. When you select a new **Picture Mode**, the TV applies the Color Tone you selected for that mode automatically.

If the Picture Mode is set to Dynamic, you will only be able to choose Cool or Standard.

Digital Clean View (Try Now)

Reduces static and ghosting caused by a weak signal. Selecting **Auto Visualization** displays the signal strength at the screen, Green indicates the best possible signal.

Available by analog channels only.

MPEG Noise Filter (Try Now)

Reduces MPEG noise and improves video quality.

HDMI Black Level (Try Now)

Some external devices connected to the TV via an HDMI cable can have issues such as low black level, low contrast, and dull colors. Use HDMI Black Level to adjust the black level to compensate.

HDMI Black Level is only available when you are viewing content from an external device connected to the TV via an HDMI connection.

Film Mode (Try Now)

Optimizes the picture quality for movies. Select this mode for watching movies.

This feature is only available when you are watching a TV broadcast or when the input signal is AV, Component (480i, 1080i), or HDMI (1080i).

Auto Motion Plus

Availability depends on the specific model.

Removes blurring and judder from scenes with rapid movement. If you select **Custom**, you can configure Blur Reduction and Judder Reduction manually and set **LED Clear Motion** on for a sharper LED image.

If you have Auto Motion Plus on, and then bring up the INFO screen, the INFO screen displays the resolution and frequency of the incoming video signal (60Hz). This frequency is not the same as the frequency of the picture the TV is displaying when Auto Motion Plus is on.

• LED Clear Motion

Availability depends on the specific model.

Removes drag from fast scenes with a lot of movement to provide a clear picture.

Viewing in 3D

Availability depends on the specific model.

MENU > Picture > 3D

The 3D option lets you view 3D media content and broadcasts. You will need to wear Samsung 3D Active Glasses to play 3D content. IR-type Samsung 3D Active Glasses and third-party 3D glasses are not supported.

- Carefully read the health and safety information concerning 3D viewing before viewing 3D content. Refer to the "3D Precautions" section for more information.
- Whether 3D video is displayed in true HD is usually determined by the quality of the content.

Starting 3D

- 1. Play 3D content or turn on a channel that's showing a 3D broadcast.
- Put on the Samsung 3D glasses, and then set the 3D Mode you want to view from Picture > 3D menu. The 3D viewing is enabled.
- The ideal viewing distance is three times the height of the screen or more. 3D images may not appear if you do not adhere to the recommended viewing angle or distance.
- The 3D feature may not work properly if there is another 3D product or an electronic device running nearby. If there is a problem, keep other electronic devices as far away as possible from the 3D Active Glasses.
- The left and right 3D images may initially overlap when the TV is turned on. It takes a moment for the display to optimize and the overlapping to go away.

There are several restrictions when using 3D TV:

- Launching Smart Hub automatically disables 3D mode.
- PIP cannot be used.
- Certain Picture options are disabled.

Changing the 3D Mode

MENU > Picture > 3D > 3D Mode

- 1. Launch 3D and then select 3D Mode under Picture > 3D.
- Choose from the 3D modes that appear on the screen. The supported 3D Modes may vary depending on the 3D content.
 - **3D Mode** is automatically configured for most 3D content.

The following 3D Modes are available. However, mode availability may vary depending on the 3D content's format,

- The supported resolutions vary for each mode, Refer to the "Supported Resolutions for 3D Modes" section for more information,
- Off (Off)

Deactivates 3D viewing.

• Normal)

Converts normal images to 3D images.

- Some formats do not support this mode.
- * (L/R)

Splits a single image into left and right overlapping images to create the 3D effect.

(T/B)

Splits a single image into top and bottom overlapping images to create the 3D effect.

Adjusting the 3D Effect

MENU > Picture > 3D

Configure the viewpoint, depth, and other 3D settings for a custom viewing experience.

Adjusting the 3D Viewpoint

Select Picture > 3D > 3D Perspective. Use the adjustment bar shown on the screen to adjust the viewpoint.

Adjusting the 3D Depth

Select Picture > 3D > Depth. Use the adjustment bar shown on the screen to adjust the depth.

This option cannot be used if 3D mode is set to (L/R) or (T/B).

• Reversing the Left/Right 3D Images

Select Picture > 3D > L/R Change. This option is used to reverse the left and right images.

Displaying 3D Content in 2D

Select Picture > 3D > 3D → 2D. This option is used to enable 2D viewing of 3D content.

This function is not available if 3D mode is set to (Normal) or (Off).

Picture Support Functions

PIP Broadcast Viewing

MENU > Picture > PIP

Watch video from an external device such as a Blu-ray player on the main screen while viewing a TV broadcast in a picture-in-picture window.

Select Picture > PIP to display the PIP settings window. The PIP settings window contains the following options:

PIP

Activates/deactivates PIP.

Antenna

Choose Air or Cable as the input source for the PIP sub-picture window,

Channel

Selects the PIP sub-picture channel,

Size

Selects the PIP sub-picture size,

Position

Selects the PIP sub-picture position.

Sound Select

Selects the audio source.

Choose a broadcast.

- PIP cannot be used while Smart Hub or 3D is active. (Corresponding for countries or models supporting 3D.)
- Turning off the TV automatically disables PIP.
- Playing a game or using the karaoke feature on the main screen can result in a lower PIP picture quality.
- For PIP to work, the main screen's source must be Component or HDMI and the input resolution must be less than FHD (Full HD). The subscreen supports digital channels only.

Changing the Picture Size and Position

Choosing the Right Screen Size

MENU > Picture > Picture Size > Picture Size (Try Now)

Most TV programs and videos are displayed in full screen, but some programs and videos are displayed in sizes that are larger or smaller. You can change the screen size for such programs and videos so that the picture fits the screen better,

Supported screen sizes vary depending on the input signal, Refer to the "Picture Sizes and Input Signals" section for more information about supported screen sizes.

16:9

Set the picture to the 16:9 wide-screen format.

Zoom1

Magnify 16:9 pictures vertically. A magnified picture can be moved up and down.

Zoom2

Magnify Zoom1 picture even more. A magnified picture can be moved up and down.

Wide Fit

Enlarge the aspect ratio of the picture so it fits the entire screen. Enjoy 4:3 images as undistorted 16:9 images.

• 4:3

Sets the picture to basic 4:3 mode.

Screen Fit

Displays the full image without any cutoff.

Smart View 1

Reduces a 16:9 picture by 50%.

Smart View 2

Reduces a 16:9 picture by 25%.

Adjusting the Screen Position

MENU > Picture > Picture Size > Position (Try Now)

Adjusts the screen position.

- This option is only available with Picture Size set to Zoom1, Zoom2, Wide Fit, or Screen Fit. When the TV is tuned to a digital channel, the screen position cannot be adjusted if the Picture Size is set to Screen Fit.
- To adjust the screen's position, select Picture > Picture Size > Position. A pop-up window appears.
- 2. Select Position again from the pop-up window.
- Press the ▲, ▼, ◀ or ▶ button to move the screen. Once done, select Position and then Close.
 Select Reset to reset the screen position.

Listening to Audio Only with the Screen Turned Off (Picture Off)

MENU > Picture > Picture Off Try Now

Turns off the screen and plays audio through the speakers only. To turn the screen back on, press any button other than the power and volume buttons.

Resetting the Picture Mode Settings

MENU > Picture > Reset Picture (Try Now)

Use this option to reset the current **Picture Mode** to its factory settings. This does not affect the settings of other **Picture Mode**.

Changing the Sound Mode and Using Sound Effects

Choosing the Right Sound Mode for the Environment

MENU > Sound > Sound Mode (Try Now)

Sound modes apply preset adjustments to the sound output, optimized for different viewing and listening circumstances.

The sound modes cannot be used when you are listening to audio through external speakers.

Standard

This is the normal sound mode.

Music

This mode emphasizes normal music instead of voice.

Movie

This mode is calibrated to provide the best sound for movies.

Clear Voice

This mode emphasizes voice.

Amplify

This mode increases the overall intensity of high-frequency sounds for a better listening experience. It is designed for hearing-impaired listeners.

Stadium

This is chosen automatically when Soccer Mode is turned on under the System menu.

Using Sound Effects

MENU > Sound > Sound Effect (Try Now)

Use sound effects to alter how the TV projects sound.

- Sound effects can only be used with the **Sound Mode** set to **Standard**.
- The sound effects cannot be used when you are listening to audio through external speakers.

Choose a Sound Effect and then adjust the settings.

DTS TruSurround (Try Now)

Produces sound that will make you feel like you are sitting in a movie theater or concert hall.

DTS TruDialog (Try Now)

Increases voice intensity to make dialog clearer.

Equalizer (Try Now)

Lets you adjust the speaker balance and make bandwidth adjustments. Select **Reset** to reset the settings.

Sound Support Functions

Selecting Speakers

MENU > Sound > Speaker Settings > TV Sound Output

This lets you choose which speakers the TV uses for audio output. To listen to the audio through the speakers of a connected receiver or home theater only, select **Receiver** or **Audio Out**. To listen to audio through the TV's speakers and the speakers of a connected AV receiver or home theater simultaneously, select TV **Speaker**. If this causes an echo effect, choose any speaker option other than TV **Speaker** to mute the TV speakers, or turn off the receiver or home theater.



Using external speakers alone disables the volume button and the mute function. In addition, certain **Sound** options will are also disabled.

Designating the TV's Installation Type

MENU > Sound > Speaker Settings > TV Installation Type

Specify the TV's installation type. Choose between **Wall Mount** and **Stand** to optimize the TV's sound automatically.

Enabling Digital Audio Output

MENU > Sound > Additional Settings (Try Now)

This Smart TV is SPDIF-enabled. The Sony Philips Digital Interface (SPDIF) provides digital audio output to speakers and various digital devices, including A/V Receivers and home theaters.

Audio Format (Try Now)

Selects the Digital Audio output (SPDIF) format. The available Digital Audio output (SPDIF) formats may vary depending on the input source.

Audio Delay (Try Now)

This setting helps correct timing mismatches between the audio and video tracks when you are watching TV and listening to audio through a digital audio device. Enabling the feature displays a slide bar that you can use to adjust the delay by up to 250ms.

Dolby Digital Comp

Availability depends on the specific area.

Some digital TV progams provide 5.1-channel Dolby audio. This TV converts Dolby audio to stereo audio so that it can play the sound through the TV's speakers. There are two methods to choose from. RF is for better sound at lower volumes, and Line is for higher volumes.

Auto Volume (Try Now)

Because each station has its own set of broadcasting conditions, the volume may fluctuate as the channel changes. The **Auto Volume** function automatically adjusts the volume of a channel by lowering or raising the sound output. **Normal** applies a normal level of volume adjustment, whereas **Night** applies a slightly lower volume level than **Normal** and is ideal for nighttime TV viewing. To use the volume control of a connected source device, deactivate the **Auto Volume** function. When using the **Auto Volume** function with a source device, the device's volume control may not function properly.

Listening to 3D Audio in 3D Mode

Availability depends on the specific model.

MENU > Sound > 3D Audio

3D audio technology provides immersive sound that matches the pop-up effect of 3D video by using perspective in the audio depth control.

Only available in 3D mode.

Resetting All Sound Settings

MENU > Sound > Reset Sound (Try Now)

Use to reset all sound settings to the factory defaults.

Setting the Time and Using the Timer

Setting the Current Time

MENU > System > Time > Clock (Try Now

Set the clock manually or automatically. Once the clock has been set, you can select the virtual remote panel's INFO to check the current time.

The clock must be reset every time the power is disconnected.

Setting the Clock using Digital Broadcast Info

MENU > System > Time > Clock > Clock Mode Try Now

Set Clock Mode to Auto. The TV automatically downloads the correct time from a digital channel. To enable this option, the TV's Antenna jack must be connected to either an antenna or a cable output and must be receiving digital broadcasts. The accuracy of the time information received may vary depending on the channel and signal. If your TV is connected to a set-top-box or satellite box using HDMI or Component connections, you must set the time manually.

If the Clock is Wrong in Auto Mode...

MENU > System > Time > Clock > Time Offset Try Now

If the time set automatically is incorrect, you can offset the clock in 1-hour increments by as much as -/+ 12 hours. Select System > Time > Clock > Time Offset and offset the clock to the correct time.

- Time Offset adjusts the time through a network connections and is only available if the Clock Mode is set to Auto and the TV is connected to the Internet though a local area network.
- Time Offset will adjust the time if the TV fails to receive time information through normal digital broadcast signals.

Setting the Clock Manually

Manually enter the time. Set Clock Mode to Manual and then select Clock Set to enter the current time and date.

Clock Set: Set the current Date and Time.

Time Zone: Select your time zone.

This function is only available when the **Clock Mode** is set to **Auto**,

Using the Timers

Using the Sleep Timer

MENU > System > Time > Sleep Timer (Try Now)

This function automatically shuts off the TV after a preconfigured period of time. Select **System** > **Time** > **Sleep Timer**. You can set the timer up to 180 minutes in 30-minute increments.

Turning On the TV using On Timer

MENU > System > Time > On Timer (Try Now)

Set the On Timer so that the TV turns on automatically at a chosen time. You can set up three separate On Timer configurations concurrently: On Timer 1, On Timer 2, and On Timer 3. The On Timer is only available if the Clock has been set,

Setup

Select Off, Everyday, Mon~Fri, Sat~Sun, or Manual. If you select Manual, you can select the days you want the On Timer to turn on the TV by highlighting each day, and then press the button.

Time

Set the time that the TV turns on automatically. See Manual under Setting the Time for time setting instructions.

Volume

Specify the volume the TV will set itself to when it turns on.

Source

Select a signal source from the list. This is the source the TV will access when it turns on. If you want to use a USB device, that USB device must be connected to the TV before you start the On Timer set up. To play back media from an HDMI or Component source such as a DVD player, Bluray player, or set-top-box, you must leave the device on. It must be on and playing when the TV turns on.

Antenna

If you have set the Source to TV, select a broadcast signal source, Air or Cable.

Channel

If you have set the **Source** to **TV**, select a channel,

Music / Photo

If you have set the **Source** to **USB**, specify a USB device folder containing music files in the music field and/or a folder containing photos in the photo field. If you select a folder that contains music files and a folder that contains photo files, the TV plays the music files and displays the photos at the same time.

To select (for example) a music folder, follow these steps:

- 1. Select the music field. The music screen appears.
- If you have no folders in the USB drive and all your music files are in the root directory, highlight, and then select the Select button. The USB drive is selected and the On Timer screen reappears displaying the name of the USB drive in the music field.
- 3. If you have folders with music on the USB drive, press the → button on the standard remote. The TV displays all the folders on the drive.
- 4. Scroll the list of folders until the folder you want appears. Move the highlight to the Select button to the right of the folder. Press the displaying the folder name in the music field.
 - If the folder you choose has sub-folders, you can select a sub-folder in the same fashion.
- 5. If you want, select a photo folder in the same way. Start by selecting the photo field.
- This feature will not function properly if the selected USB device does not contain media files or a folder has not been specified.
- The slideshow will not start if there is only one image file on the USB device.
- Folders with long names cannot be selected.
- Always use different folder names for multiple USB devices.
- Use a USB memory stick or multi-card reader. The **On Timer** may not work with certain battery-powered USB devices, MP3 players, or PMPs because the TV may take too long to recognize the device.

Turning Off the TV Using the Off Timer

MENU > System > Time > Off Timer (Try Now)

Set the Off Timer to turn the TV off automatically at a specific time. You can set up three separate Off Timer configurations concurrently: Off Timer 1, Off Timer 2, and Off Timer 3. The Off Timer is available only if the Clock has been set.

Setup

Select Off, Everyday, Mon~Fri, Sat~Sun, or Manual. If you select Manual, you can select the days you want the Off Timer to turn off the TV by highlighting each day, and then press the button.

Time

Set the time that the TV turns off automatically.

Using the Screen Burn Protection and Energy Saving Features

Preventing Screen Burn

MENU > System > Auto Protection Time (ry Now)

Still images can leave burned-in after-images on the screen if left on the screen for a long period of time. Use Screen Burn Protection to protect the screen. Select **System > Auto Protection Time** and then choose a time setting from the list. If a still image is shown on the screen for longer than the time you selected, the TV will automatically activate the Screen Burn Protection function to prevent burnt-in after- images.

Using Energy Saving Features

MENU > System > Eco Solution (Try Now)

Eco Solution adjusts the TV's brightness level and prevents overheating to reduce overall power consumption.

Energy Saving (Try Now)

Select a brightness setting from the list to reduce the TV's power consumption.

Eco Sensor

Availability depends on the specific model.

Automatically adjusts the TV's brightness level based on the ambient light level to reduce the TV's power consumption. If the Eco Sensor has adjusted the screen's brightness level, you can manually adjust the screen's minimum brightness level by adjusting the Min. Backlight. Changing the Backlight setting while Eco Sensor is running automatically disables Eco Sensor.

No Signal Power Off (Try Now)

Select a time from the list. If no signal is received for the specified duration, the TV will automatically cut off the power to reduce power consumption.

Auto Power Off (Try Now)

If the TV remains turned on for four hours without any user input, the TV will automatically turn off to prevent overheating.

Using the e-Manual

Launching the e-Manual

MENU > Support > e-Manual

The embedded e-manual contains information about your TV's key features.

- Alternatively, you can download a copy of the e-manual from Samsung's website, and read it on your computer or print it out.
- Words in yellow (e.g., **Picture Mode**) indicate a menu item and bold words in white (e.g., **Smart Hub**) indicate remote control buttons.
- Arrows are used to indicate the menu path, (Example: MENU > Picture > Picture Mode)
- Press the E-MANUAL button. You can also select Support > e-Manual in the TV's menu. The e-Manual is loaded on the screen.
- 2. Select a category from the left side of the screen. Once a selection has been made, the contents of the selected category appears on the right side of the screen.
- 3. Select an item from the list. This opens the e-manual on the corresponding page.

If a description doesn't fit on a single screen...

Scroll pages using one of the following methods.

Position the focus on the page to display
 / on the screen and move ▲ or ▼ to scroll through the page.

Additional e-Manual Features

Loading Pages using Keywords

Select **Search** from the screen to bring up the search screen. Enter a search term and then select **Done**. Select an item from the search results to load the corresponding page.

Loading Pages from the Index Page

Select **Index** to bring up the index screen. Select a keyword from the list to navigate to the relevant page.

Using History to Load Previously Read Pages

Select **Opened page**. A list of previously read pages is shown. Select a page. The e-Manual jumps to the selected page.

Accessing the Menu from the e-Manual (Try Now)

Select Planet space. (Try Now) from the right side of a feature-description page to access the corresponding menu and try out the feature right away. If you want to read the e-Manual entry on a specific screen menu feature:

- Press the E-MANUAL button to load the corresponding e-Manual page.
- Certain menu options cannot be used.

Loading Reference Pages

Select (Link) from the right side of a feature-description page to access the corresponding reference page.

Updating the e-Manual to the Latest Version

You can update the e-Manual in the same way you update apps.

- 1. Press the button to open the First Screen, and then select the Panel icon. The Panel screen appears,
- 2. Go to the SAMSUNG APPS screen and the highlight the e-Manual.
- 3. Press and hold the 🕒 button. The Tools menu appears.
- 4. Select **Update apps** from the Tools menu, A pop-up window appears,
- 5. Select e-Manual in the pop-up window and then select **Update**. To update the e-Manual to the latest version.

Configuring Auto Update

MENU > Smart Hub > Apps Settings

To update the e-manual automatically, navigate to the **Smart Hub** > **Apps Settings** menu and set the **Auto Update** option to **On**. The e-manual is updated automatically when an update becomes available.

Updating the TV's Software

MENU > Support > Software Update (Try Now)

View your TV's software version and update it if necessary.

Update now

MENU > Support > Software Update > Update now (ry Now)

An online upgrade downloads and installs the upgrade software directly from the Internet. Configure the TV to connect to a network and make sure it can access the Internet. Select Online.

Manual Update

Download the latest update file from the Samsung website. Decompress the file and copy it into the root directory of a flash drive. Insert the flash drive one of the TV's USB ports to install the update.

Enabling Automatic Software Updates

MENU > Support > Software Update > Auto Update (Try Now)

From the Support > Software Update menu, set Auto Update to On. The TV can always keep to the latest software because the TV can update a software internally. It also operates when using the TV.

- While updating, you may experience that the TV functions for using internet may be slower.
- This option requires an Internet connection.
- If you agree to the Smart Hub terms and conditions, **Auto Update** will be set to **On**, If you don't want the TV's software updated automatically, set **Auto Update** (**Support** > **Software Update** > **Auto Update**) to **Off**.

Protecting the TV from Hacking and malicious code

MENU > System > Smart Security (Try Now)

When the TV is connected to the Internet, it is vulnerable to hacks and malicious code. **Smart Security** protects the TV and storage media connected to the TV from such threats.

Navigate to System > Smart Security and set Smart Security to On.

Checking the TV and Connected Storage Media

MENU > System > Smart Security > Scan (Try Now)

Navigate to System > Smart Security and select Scan. This scans the TV and connected media for the presence of malicious code. If no malicious code was detected, a notification window appears on the screen.

If malicious code is detected...

If malicious code was found, the results of the scan will appear on the screen. This result window displays all malicious code found, and provides options to either quarantine the code or allow them to continue.

- 1. Select all malicious code to quarantine or allow.
- Select Block or Allow. This moves the selected malicious code to the Isolated List or Allowed List.
 - The Isolated List displays all blocked malicious code. You can also relocate codes from this list to the Allowed List. Try Now
 - The Allowed List displays all allowed malicious code. You can also relocate codes from this list to the Isolated List, Try Now

Automatically Scanning when the TV is Powered On

MENU > System > Smart Security > Settings > Auto Scan

Navigate to System > Smart Security > Settings and then set Auto Scan to On. This automatically scans the TV and connected storage media when the TV is powered on.

Automatically Adding malicious code to the Blocked List

MENU > System > Smart Security > Settings > Move to Isolated List automatically

Navigate to System > Smart Security > Settings and set Move to Isolated List automatically to On. Malicious code found during the scanning process is automatically added to the Blocked List.

Using Other Functions

Adjusting the Menu Transparency

MENU > System > Accessibility > Menu Transparency (Try Now)

Navigate to System > Accessibility and adjust the opacity level. Adjust the menu's transparency.

When the **High Contrast** (System > Accessibility > High Contrast) setting is set to **On**, menu display is automatically set to opaque and you cannot change the **Menu Transparency** settings.

White Text on Black Background (High Contrast)

MENU > System > Accessibility > High Contrast (Try Now)

Navigate to System > Accessibility and set High Contrast to On. This option changes major service screens to white text on black background or change the transparent TV menus to opaque so that text can be more easily read.

Expanding the Smart Hub's Focus Area

MENU > System > Accessibility > Enlarge (Try Now)

Navigate to System > Accessibility and set Enlarge to On. This zooms in the focused item when you use Smart Hub.

Checking Notifications

MENU > System > Notifications (Try Now)

Select **Notifications** from the **System** menu to view the list of event messages generated by the TV. **Notifications** appear on the screen when events such as an update release for an app or Samsung Account login/logout occurs.

- Select **Delete All** to delete all notifications.
- Select Service Notice to check the SMART TV service notifications in a web browser,

Changing the Menu Language

MENU > System > Menu Language (Try Now)

Select System > Menu Language and then choose a language from the list. Use this option to change the menu language.

Setting Up a Password

MENU > System > Change PIN (Try Now)

Set a PIN (Personal Identification Number) to lock channels, reset the TV, and change the TV settings.

- 1. Select System > Change PIN. The PIN input window appears.
- 2. Enter a PIN. The default PIN is 0000.
- 3. Enter a new PIN and then enter it again to confirm it. The PIN change is complete.
- If you forget your PIN, you can reset it using your remote control. With the TV turned on, press the following buttons on the remote to reset the PIN to 0000: $\text{MUTE} \to + \to \text{RETURN} \to \to \text{RETURN} \to + \to \text{RETURN}$. "+" is the Volume Up button. "-" is the Volume Down button.

Enabling Game Mode

MENU > System > General > Game Mode (Try Now)

Game Mode optimizes the TV's settings for playing video games on a gaming console such as $PlayStation^{TM}$ or $Xbox^{TM}$.

- Game Mode cannot be used for normal TV viewing.
- Connect the gaming console before enabling Game Mode. Otherwise, the picture quality may suffer,
- The screen may shake a little.
- Enabling Game Mode automatically sets the Picture Mode to Standard and the Sound Mode to Movie.
- To use a different external device, first disconnect the game console and disable Game Mode.

Enjoying Rich Colors and Superior Picture Quality (BD Wise)

Availability depends on the specific model.

MENU > System > General > BD Wise

Connecting a Samsung DVD player, Blu-ray player, or home theater system that supports BD Wise enables the richest colors and best possible picture quality. Enabling BD Wise automatically optimizes the TV's resolution.



This feature is only available when the external device is connected via an HDMI cable,

Locking/Unlocking the Panel Keys

MENU > System > General > Panel Lock (Try Now)

Use to lock and unlock the TV's front panel buttons (menu, channel, and volume). Select **System** > **General** > **Panel Lock** and lock/unlock the keys.

Showing/Hiding the Samsung Logo while Booting

MENU > System > General > Boot Logo (Try Now)

Use to enable or disable the Samsung logo display that appears when the TV starts up,

Enabling the AV Color System

MENU > System > General > AV Color System (ry Now

Normally the TV can receive image and sound with good quality when in the mode Auto. This mode detects the signal color system automatically. In case of some signal reception with color unsatisfactory, select the AV Color System mode to PAL-M, PAL-N or NTSC.



Available only in AV mode,

Registering the TV as a DivX-Certified Device (Watching Paid DivX Movies)

MENU > System > DivX® Video On Demand (Try Now)

To watch DivX DRM protected movies on the TV, you must register the TV as a DivX certified device.

- DRM stands for Digital Rights Management and is a technical security mechanism to protect the copyright of the content provider.
- You can watch movies that you have recorded or free DivX movies without registration.
- Visit the DivX website (http://www.divx.com) and log into your user account before registering the TV as a DivX-certified device. If you do not have an account, please create one.
- Select System > DivX® Video On Demand. A window with a registration code appears on the screen.
- Visit the DivX website on a computer and click [Register Your Device] under [Support] from the top menu,
- 3. Enter the registration code shown on the TV's screen in the [Enter your registration code] field.
- 4. Enter the TV's name in the [Name your device] field and then click [NEXT].
- 5. Click [DOWNLOAD] and save the [device_name,divx] file.
- 6. Transfer the [device_name.divx] file from the computer onto a USB device and then plug the USB device into the TV.
- 7. Play the [device_name.divx] file on the TV to register the TV as a DivX-certified device.

Restoring the TV to the Factory Settings

MENU > Support > Self Diagnosis > Reset (Try Now)

This option restores all TV settings (excluding the Internet) to the factory defaults,

- 1. Select Support > Self Diagnosis > Reset. The Security PIN entry window appears on the screen.
- 2. Enter the Security PIN and then select **Yes**. All settings are then reset. The TV turns off and on again automatically, and then displays the **Setup** screen.
 - For more information on Setup, refer to the user manual that came with the TV.

Turning the TV into a Display Model (exclusively for retail stores)

MENU > Support > Use Mode (Try Now)

Select Support > Use Mode > Store Demo. This turns the TV into a display model for use in a retail environment.

- For all other uses, select Home Use.
- Store Demo should be used in retail environments only. With Store Demo, certain functions are disabled and the TV automatically resets itself after a certain amount of time.

Data Service



Availability depends on the specific area.

Allows the user to use information (text, still images, graphics, documents, software, etc.) transmitted via broadcast media.

Auto Run Data Service

MENU > Broadcasting > Channel Settings > Auto Run Data Service

Sets whether or not to automatically run data service. Auto Run Data Service automatically runs data service without user intervention.



If any other secondary function is under way, Auto Run Data Service may not work.

Using Data Service

- 1. If Auto Run Data Service is On, The data service will automatically run with loading banner,
- 2. Select OK. The data service screen will be displayed.
- 3. Select a desired option by using your remote on the data service screen. The selected service will be started.
- 4. If you select EXIT using your remote, data service will be closed.



Main Data Service buttons and their functions

▲ / ▼ / ◀ / ▶

Moves the Data Service menu up, down, left and right.

OK

Runs a selected item.

EXIT

Stops a running Data Service.



Operations may differ depending on the service provider.

Getting Support

The TV has several built-in systems designed for user and TV system support.

Support through Remote Management

MENU > Support > Remote Management (Try Now)

If you need assistance with your TV, you can use this feature to let Samsung Electronics diagnose your TV remotely. You will need to read and agree to the service agreement before using this feature. A Samsung Electronics technician will then diagnose, repair, and update your TV remotely. These features are only available when your TV is connected to the Internet.

What Does Remote Service Do?

Samsung Remote Support service offers you one-on-one support with a Samsung Technician who can remotely,

- Diagnose your TV
- Adjust the TV settings for you
- Perform a factory reset your TV
- Install recommended firmware updates

How Does it Work?

Having a Samsung Tech remotely service your TV is easy.



Call the Samsung Contact Center and ask for remote support.



Open the menu on your TV and go to the Support section,



Select Remote Management, and then read and agree to the service agreements. When the PIN screen appears, provide the PIN number to the agent.



The agent accesses your TV.

Finding the Information You Need for Service

MENU > Support > Contact Samsung (Try Now)

Use this option to display the address of the Samsung website, the call center phone number, your TV's model number, your TV's software version, the Smart Hub info, and other information you need to get service support from a Samsung call agent or the Samsung website,

There is a problem with the picture.

Testing the Picture

MENU > Support > Self Diagnosis > Picture Test Try Now

Before you review the list of problems and solutions below, use Picture Test to determine if the problem is caused by the TV. The Picture Test displays a high definition picture you can examine for flaws or faults. If the test picture does not appear or there is noise or distortion, the TV may have a problem. Contact Samsung's Call Center for assistance. If the test picture is displayed properly, there may be a problem with an external device. Please check the connections. If the problem persists, check the signal strength or refer to the external device's user manual.

The Problem	Try this!		
Flickering and Dimming	If your Samsung Television is flickering or dimming sporadically, you may need to disable some of the energy efficiency features. Disable Energy Saving (System > Eco Solution > Energy Saving) or Eco Sensor (System > Eco Solution > Eco Sensor).		
Component Connections/Screen Color	If the color on your Samsung television screen is not correct or the black and white colors are off, run Picture Test (Support > Self Diagnosis > Picture Test). If the test results indicate that the problem is not caused by the TV, do the following: • Confirm that the TV's video input connectors are connected to the correct external device video output connectors. • Check the other connections as well. If the TV is connected to an external device via a component cable, confirm that the Pb, Pr, and Y jacks are plugged into their proper connectors.		
Screen Brightness	If the colors on your Samsung TV are correct but just a little too dark or bright, try adjusting the following settings first. • Go to the Picture menu and adjust the Backlight, Contrast, Brightness, Sharpness, Color, and Tint (G/R) settings.		
Auto Motion Plus/Blur	If you notice ghosting or blurring on the screen, use the Auto Motion Plus option (Picture > Picture Options > Auto Motion Plus) to resolve the issue. Availability depends on the specific model. Availability depends on the specific model.		
Unwanted Powering Off	If your Samsung TV appears to turn off by itself, try disabling some of the TV's energy efficiency features. See if Sleep Timer (System > Time > Sleep Timer) has been enabled. The Sleep Timer automatically turns the TV off after a specified period of time. If the Sleep Timer has not been enabled, see if No Signal Power Off (System > Eco Solution > No Signal Power Off) or Auto Power Off (System > Eco Solution > Auto Power Off) has been enabled and disable them.		

The Problem	Try this!	
Problems Powering On	When the TV is turned on, the remote control receiver flashes 5 times before the screen turns on. If you are having problems powering on your Samsung television, there are a number of things to check before calling the service department. Confirm that the TV's power cord is connected correctly at both ends and that the remote control is operating normally. Make sure that the antenna cable or cable TV cable is firmly connected. If you have a cable/satellite box confirm that it is plugged in and turned on.	
Unable to find a Channel	If your TV is not connected to a cable box or satellite box, run Setup (System > Setup) or Auto Program (Broadcasting > Auto Program).	
The TV image does not look as good as it did in the store.	Store displays are all tuned to digital, HD (high definition) channels. If you have an analog cable/set top box, upgrade to a digital set top box. Use HDMI or Component cables to deliver HD (high definition) picture quality. Many HD channels are upscaled from SD (Standard Definition) content. Look for a channel that is broadcasting true HD content. • Cable/Satellite Subscribers: Try HD channels from the channel lineup. • Air/Cable Antenna Connection: Try HD channels after running the Auto Program function. Adjust the cable/satellite box's video output resolution to 1080i or 720p.	
The picture is distorted.	The compression of video content may cause picture distortions, especially in fast moving pictures from sports programs and action movies. A weak or bad quality signal can cause picture distortions. This is not an issue with the TV. Mobile phones used close to the TV (within 3 ft/1m) may cause noise in analog and digital channels.	
The color is wrong or missing.	If you're using a Component connection, make sure that the Component cables are connected to the correct jacks. Incorrect or loose connections may cause color problems or a blank screen.	
The color is poor or the picture is not bright enough.	Go to the Picture menu and then adjust the Picture Mode, Brightness, Sharpness, and Color settings. See if Energy Saving (System > Eco Solution > Energy Saving) has been enabled. Try resetting the picture. (Picture > Reset Picture)	
There is a dotted line on the edge of the screen.	If the Picture Size has been set to Screen Fit, change the setting to 16:9. Change the cable/satellite box resolution.	
The picture is black and white.	If you are using AV composite input, connect the video cable (yellow) to the TV's green component jack.	

I can't hear the sound clearly.

Testing the Sound

MENU > Support > Self Diagnosis > Sound Test (Try Now)

Before you review the list of problems and solutions below, make sure that the TV Sound Output menu item is set to TV Speaker, and then listen to the speakers again. If the TV still does not play audio, run the Sound Test. The Sound Test uses a built-in melody to check for sound problems. If the TV does not play sound during the Sound Test, or the sound is distorted, there may be a problem with the TV. Contact Samsung's Call Center for assistance. If the TV plays the Sound Test melody without distortion, there may be a problem with an external device. Please check the connections. If the problem persists, refer to the external device's user manual.

The Problem	Try this!		
There is no sound or the sound is too low at maximum volume.	Check the volume control of the device (cable/satellite box, DVD, Blu-ray, etc.) connected to your TV.		
The picture is good but there is no sound.	Set Sound > Speaker Settings > TV Sound Output to TV Speaker. If you are using an external device, check the device's audio output option. (For example, you may need to change your cable box's audio option to HDMI if the box connected to your TV is using an HDMI cable.) To listen to the computer sound, connect the external speaker to the computer's audio output connector. If your TV has a headphone jack, make sure there is nothing plugged into it. Reboot the connected device by disconnecting and then reconnecting the device's power cable.		
The speakers are making an odd sound.	Make sure that the audio cable is connected to the correct audio output connector on the external device. For antenna or cable connections, check the signal information. A low signal level may cause sound distortions. Run Sound Test (Support > Self Diagnosis > Sound Test).		

I can't see 3D images clearly.

Testing 3D Picture Quality

Availability depends on the specific model.

MENU > Support > Self Diagnosis > 3D Picture Test

To test 3D picture quality, you must be wearing 3D glasses and the glasses and the TV must be paired.

To test 3D picture quality, the TV and the 3D glasses must have been paired. Put on the 3D glasses, navigate to **Support** > **Self Diagnosis** and select **3D Picture Test**. The 3D Picture Test displays a high definition picture to examine the 3D screen for flaws or faults. If the test fails to identify a problem, there may be a problem with an external device or the signal strength.

- If the test picture does not appear or there is noise or distortion, the TV may have a problem. Contact Samsung's Call Center for assistance.
- If the test picture is displayed properly, there may be a problem with the external device. Please check the connections. If the problem persists, check the signal strength or refer to the external device's user manual.

The Problem	Try this!	
The 3D glasses are not working correctly.	Make sure the glasses are powered on. The 3D feature may not work properly if there is another 3D product or an electronic device running nearby. If there is a problem, keep other electronic devices as far away as possible from the 3D Active Glasses.	
I can't see 3D images clearly.	The ideal viewing distance is three times or more the height of the screen. We also recommend watching 3D content with your eyes level with the screen.	
The batteries in the 3D glasses are flat.	Turn off the 3D glasses when they are not in use. If you leave the 3D glasses on, the battery lifespan is shortened.	

There is a problem with the broadcast.

The Problem	Try this!		
The TV is not receiving all channels.	 If your TV is not connected to a cable box or satellite box: Confirm that the coaxial cable is securely connected to the TV. If you are using an antenna, verify it is positioned correctly and the all the connections are secure. Run Setup (System > Setup) or Auto Program (Broadcasting > Auto Program). 		
There are no captions with digital channels.	Go to Caption (System > Accessibility > Caption) and change the Caption Mod Some channels may not have caption data.		
The picture is distorted.	The compression of the video content may cause picture distortions. This is especially true with fast moving pictures from sports programs and action movies. A weak signal can cause picture distortions. This is not a problem with the TV.		

The computer won't connect.

The Problem	Try this!	
The "Mode Not Supported" message appears.	Set your PC's output resolution so it matches a resolution supported by the TV.	
The video is OK but there is no audio.	If you are using an HDMI connection, check the audio output setting on your PC. If you are using a DVI to HDMI cable, a separate audio cable is required.	

I can't connect to the Internet.

The Problem	Try this!	
The wireless network connection failed.	Make sure the TV is connected to a wireless IP router.	
The software update over the Internet has failed.	Check the network connection status. If the TV is not connected to a network, connect to a network. The upgrade stops if you already have the latest software version.	

Data Service

There is something wrong with the TV.	Try this!	
Why am I getting on- screen messages when I haven't selected the Data Service option?	If Auto Run Data Service is set to On, messages will automatically appear on the screen when you watch a broadcast that supports the Data Service. If the broadcast doesn't support the Data Service, no messages will appear on the screen. If you do not wish to receive Data Service messages, disable Auto Run Data Service.	
How do I hide Data Service messages?	On the Samsung Smart Control, press and hold the RETURN button. On a standard remote control, press the EXIT button. The messages hide. If you do not wish to receive Data Service messages, disable Auto Run Data Service.	
How do I use the Data Service?	Enabling the Auto Run Data Service option automatically displays messages on the screen whenever you watch a broadcast that supports the Data Service. You can press the corresponding buttons shown on the screen to access additional features and functions offered by that broadcast.	
What is an interactive service and how does it work?	Interactive services include viewer surveys, quizzes, ticket requests, product purchases, and other interactions between the viewer and the TV station. Generally, you will need to set up an account with the broadcaster and log in to the account in order to enjoy the interactive services they offer. Note that interactive services are only available when your TV is connected to the Internet. In addition, T-Commerce requires that you have a certificate. Copy your certificate from the computer to a USB device and connect that device to the TV. (Interactive services are not being offered yet. The actual service launch date varies depending on the broadcaster.)	
A message displays "Receiving" but no change happens.	This indicates an error has occurred while receiving data. An execution error message will also appear on the screen. If this happens, try again.	
Nothing is displayed on the screen after the Data Service is launched.	The Data Service may be initializing or the signal may have been severed by the broadcaster.	
What is Blur Reduction?	The Data Service can cause the same screen to appear and create a blur. Blur Reduction prevents this blurring effect. If you see a message saying that the Data Service is about to terminate because of Auto Protection Time, press any button. This will keep the Data Service running.	

I am having trouble launching/using apps.

The Problem	Try this!	
I launched an app, but it's in English. How can I change the language?	Languages supported by the app may be different from the user interface language. The ability to change the language depends on the service provider.	
My application is not working.	Check with the service provider. Refer to the help section on the application service provider's website.	

My file won't play.

The Problem	Try this!
Some files can't be played.	This problem may occur with high-bitrate files. Most files can be played back, but you might experience problems with high-bitrate files.

I want to reset the TV.

Reset	Path	Description
Reset Settings	MENU > Support > Self Diagnosis > Reset	Reset Picture, Sound, Channel, Smart Hub, and all other settings except for the network settings to their factory default settings.
Resetting Smart Hub	MENU > Smart Hub > Smart Hub Reset	Reset all saved information relating to Samsung accounts and linked service accounts, as well as Smart Hub service agreements and applications.

Other Issues

The Problem	Try this!	
The TV is hot.	Watching TV for an extended period of time causes the panel to generate heat. The heat from the panel is dissipated through internal vents running along the top of the TV. The bottom, however, may feel hot to the touch after extended use. Children watching TV need constant adult supervision to prevent them from touching the TV. This heat, however, is not a defect and does not affect the TV's functionality.	
The picture won't display in full screen.	HD channels will have black bars on either side of the screen when displaying upscaled SD (4:3) content. Black bars will appear at the top and bottom of the screen when you watch movies that have aspect ratios different from your TV. Adjust the picture size options on your external device or set the TV to full screen.	
The "Mode Not Supported" message appears.	The output resolution of the attached device is not supported by the TV. Check the TV's supported resolutions accordingly.	
The Captions item in the TV menu is grayed out.	You cannot select the Caption menu if you have selected a source connected to the TV via HDMI or Component. To view captions, turn on the external device's caption function.	
The TV smells of plastic.	This smell is normal and will dissipate over time.	
The Signal Information option under Self Diagnosis isn't activated.	Verify that the current channel is a digital channel. The Signal Information is only available for digital channels.	

The Problem	Try this!			
The TV is tilted to the side.	Remove the base stand from the TV and reassemble it.			
The Broadcasting option has been deactivated.	Broadcasting is only available when the Source is set to TV. The Broadcasting menu cannot be accessed while watching TV using a cable box or satellite receiver.			
The settings are lost after 5 minutes or every time the TV is turned off.	If the Use Mode is set to Store Demo, the TV's audio and video settings are automatically reset every 5 minutes. Change the Use Mode (Support > Use Mode) to Home Use.			
There is an intermittent loss of audio or video.	Check the cable connections and reconnect them. Loss of audio or video can be caused by using overly rigid or thick cables. Make sure the cables are flexible enough for long term use. If you are mounting the TV to a wall, we recommend using cables with 90-degree connectors.			
There are small particles on the TV's bezel.	This is part of the product's design and is not a defect.			
The PIP menu is not available.	PIP functionality is only available when you are using an HDMI or Component source.			
A POP (TV's internal banner ad) appears on the screen.	Change the Use Mode (Support > Use Mode) to Home Use.			
The TV is making a popping noise.	The expansion and contraction of the TV's outer casing may cause a popping noise. This does not indicate a product malfunction. The TV is safe to use.			
The TV is making a humming noise.	Your TV utilizes high-speed switching circuits and high levels of electrical current. Depending on the TV's brightness level, the TV may seem slightly noisier than a conventional TV. Your TV has undergone strict quality control procedures that meet our demanding performance and reliability requirements. Some noise coming from the TV is considered normal and is not an acceptable cause for an exchange or refund.			

Read Before Using 3D Viewing Mode

Availability depends on the specific model.

3D Precautions

Marning

- When viewing a 3D video under a fluorescent lamp (50 Hz 60 Hz) or 3-wavelength lamp, you
 may notice a small amount of screen flickering,
 - If this occurs, dim or turn off the light.
- Switching the input mode while watching a 3D movie may disable the 3D function on the TV.
 - As a result, the 3D glasses may not function and the movie may not be displayed properly.
- Ensure you are within the working distance of the glasses when you view a 3D video.
 - The images may not be viewable in 3D if you move outside of the working distance for 3 seconds,
 - If the 3D glasses are moved outside of their working distance, the signal from the TV will disconnect and the glasses' 3D function will turn off after several seconds. When this happens, the red LED will turn on for 3 seconds.
- If you lie on your side while watching TV with 3D active glasses, the picture may appear dark or
 may not be visible. The actual 3D effect may be experienced differently depending on the viewer.
 The 3D effect may not be visible if the visual ability of your left eye differs greatly from the visual
 ability of your right eye.
- If a part of the 3D glasses or lenses is defective or damaged, it cannot be repaired and the
 glasses should be replaced. If the glasses stop working within the warranty period, the glasses
 can be repaired or replaced for free. If the glasses have been damaged due to the fault of the
 customer or the warranty period has expired, a new pair of glasses will have to be purchased.
- The 3D glasses may not work properly due to interference from other 3D products or electronic
 devices that operate on the 2.4GHz frequency such as a microwave oven or Internet AP. If
 the 3D function malfunctions due to interference, please move all other electronic or wireless
 communication devices as far away from the glasses and the TV as possible.
- The vividness of the image may appear degraded if you view 3D video in a place that is exposed to direct sunlight or illumination.
- The 3D glasses may malfunction if there is an electric field or metallic object such as a steel
 plate nearby. Keep the glasses as far away as possible from electric fields and metallic objects.
- With SSG-3570 model glasses, the glasses may power off if you remain stationary while viewing 3D video for an extended period of time.
- With SSG-3570 model glasses, if the 3D glasses do not function immediately after you put them
 on when the TV is in 3D mode, take them off and then put them back on.

△ Caution

IMPORTANT HEALTH AND SAFETY INFORMATION FOR 3D IMAGES, READ THE FOLLOWING CAUTIONS BEFORE YOU OR YOUR CHILD USE THE 3D FUNCTION.

- Adults should frequently check on children who are using the 3D function. If there are any
 complaints of tired eyes, headaches, dizziness, or nausea, stop the child from viewing the 3D TV
 and ensure that they rest.
- Do not use the 3D glasses for other purposes such as general wear, sunglasses, protective goggles, etc.
- Some viewers may experience discomfort such as dizziness, nausea, and headaches while viewing 3D TV. If you experience any of these symptoms, stop viewing the 3D TV, remove the 3D glasses, and rest for awhile.
- Watching 3D pictures for an extended period of time may cause eye strain. If you experience any
 eye strain, stop viewing the 3D TV, remove the 3D glasses, and rest for awhile.
- Do not use the 3D function or 3D glasses while walking or moving around. Using the 3D function or 3D Active Glasses while moving around may result in injury from running into objects, tripping, and/or falling.
- Do not sleep with the 3D glasses on. You can damage or break the temples.
- The temples on your 3D glasses are not foldable. Forcing the temples to fold will damage the 3D glasses.
- With SSG-3570 model glasses, do not shake your 3D glasses repeatedly. Shaking the glasses will
 power them on and can cause the battery to discharge faster than it would normally.
- With SSG-5100GB model glasses, there is a danger of explosion if the battery is incorrectly replaced.
- With SSG-5100GB model glasses, make sure to replace the battery with the same type.

▲ Safety Precautions

The following safety instructions are to ensure your personal safety and prevent property damage. Please read the following to ensure the proper use of the product.

- Do not place the product in a location exposed to direct sunlight, heat, fire, or water, Exposure may result in a product malfunction or fire.
- Do not apply force to the lenses of the 3D glasses. Do not drop or bend the product. Applying force, dropping, or bending may result in a 3D glasses malfunction.
- Keep the components of the 3D glasses out of reach of children. Especially, ensure children do
 not swallow any of the components. If your child swallows a component, consult your doctor
 immediately.
- When cleaning the product, do not spray water or cleaner directly onto the surface of the product. Spraying water or cleaner directly onto the glasses may result in fire or electric shock, damage to the product's surface, or cause the indicator labels on the product's surface to come loose.
- Do not apply chemicals containing alcohol, solvent, or surfactant such as wax, benzene, thinner, pesticide, air freshener, lubricant, or cleaner to the product. These chemicals may cause the product's exterior to be discolored or cracked, or labels or instructions to be removed. Use only a soft cloth such as superfine fibers or cotton flannels for cleaning the product as the surface or the lenses easily crack. Because the product can be easily scratched with foreign substances, make sure to dust off the cloth before using.
- Do not disassemble, or attempt to repair or modify your 3D active glasses by yourself.
- Be careful not to let the temple ends of the 3D active glasses harm your eye.
- Do not sleep with the 3D glasses on. You can break the arms.
- Use your hands to put on or remove the 3D glasses.
- Use only the specified standard batteries. When replacing the battery, insert the battery so that
 its polarity (+, -) is correct. Failing to do so may damage the battery or result in fire, personal
 injury or environmental damage caused by liquid leaking from the battery. (applicable to the SSG5100 only).
- Keep the used battery out of the reach of children so that they do not accidently swallow the battery. If your child has swallowed the battery, consult your doctor immediately. (applicable to the SSG-5100 only).
- Swallowing the cylindrical (button type) battery can cause serious damage to your internal organs. If this happens, contact a doctor immediately.

Supported Resolutions for 3D Modes

These specifications apply to the 16:9 display ratio only.

HDMI

• 3D Mode: (L/R), (T/B)

Resolution	Frequency (Hz)	
1280 x 720p	50 / 60	
1920 x 1080i	50 / 60	
1920 x 1080p	24 / 25 / 30 / 50 / 60	

Component

Resolution	Frequency (Hz)	
1280 x 720p	59.94 / 60	
1920 x 1080i	59.94 / 60	
1920 x 1080p	23.98 / 24 / 29.97 / 30 / 59.94 / 60	

Digital Channel

Resolution	Frequency (Hz)	
1280 x 720p	59.94 / 60	
1920 x 1080i	59.94 / 60	

Videos/Photos

Refer to the "Read Before Playing Photo, Video, or Music Files" section.

Computer via HDMI Cable

The optimal resolution for computers connected to the TV via an HDMI cable is 1920×1080 . If you select another resolution, the TV may not display 3D images correctly and may not be able to display the computer video in full screen.

Read Before Using Apps

- Due to the product characteristics featured on the Samsung Smart Hub, as well as limitations in available content, certain features, applications, and services may not be available on all devices or in all territories. Some Smart Hub features may also require additional peripheral devices or membership fees. Visit http://www.samsung.com for more information on specific device information and content availability. Services and content availability are subject to change without prior notice.
- Samsung Electronics takes no legal responsibility whatsoever for any interruption of app services caused by the service provider for any reason,
- Application services may be provided in English only and available content may vary depending on the area.
- For more information about applications, visit the applicable service provider's website.
- An unstable Internet connection may cause delays or interruptions. In addition, applications may terminate automatically depending on the network environment. If this occurs, check your Internet connection and try again.
- Application services and updates may become unavailable.
- Application content is subject to change by the service provider without prior notice.
- Specific services may vary depending on the version of the application installed on the TV.
- An application's functionality may change in future versions of the application. If this occurs, run
 the application's tutorial or visit the service provider's website.
- Depending on the service provider's policies, certain applications may not support multitasking.

Read Before Using the Web Browser

- 1. Select Web Browser, The browsing screen may differ from the one on your computer,
- 2. The web browser is not compatible with Java applications.
- You cannot download files. If you attempt to download a file, you will receive an error message instead.
- 4. The web browser may not be able to access certain websites.
- 5. Playing Flash videos may be restricted.
- 6. E-commerce for online purchases is not supported.
- 7. With websites that have scrollable windows, scrolling a window can result in corrupted characters.
- 8. ActiveX is not supported.
- Certain options are not accessible in Link Browsing mode. (Switch to Pointer Browsing to activate those options.)
- Only a limited number of fonts are supported. Certain symbols and characters may not be displayed properly.
- 11. The response to remote commands and the resulting on-screen display may be delayed while a webpage is loading.
- 12. Loading a webpage may be delayed or suspended completely with certain operating systems.
- 13. The copy and paste operations are not supported.
- 14. When composing an email or a simple message, certain functions such as the font size and color selection may not be available.
- 15. There is a limit to the number of bookmarks and the size of the log file that can be saved.
- 16. The number of windows that can be opened concurrently varies depending on the search conditions and the TV model.

- 17. The web browsing speed will vary depending on the network environment.
- 18. The web browser supports .mp3 audio files only.
- 19. The web browser supports a specific file format for importing and exporting bookmarks. (Compatible Format: Netscape-bookmarkfile- 1)
- 20. The folder tree information is not included when importing and exporting bookmarks.
- 21. Exporting bookmarks to a USB device connected to the TV saves the bookmarks under a folder named "Samsung SmartTV Bookmark".
- 22. If the Clock (System > Time > Clock) has not been set, the browsing history will not be saved.
- 23. The browsing history is saved from latest to oldest, with the oldest entries being overwritten first.
- 24. Depending on the types of video/audio codecs supported, it might not be possible to play certain video and audio files while playing Flash content.
- 25. Video sources from PC-optimized streaming service providers may not play properly on our proprietary web browser,
- 26. Using the on-screen QWERTY keyboard automatically disables PIP. (Except when entering a URL.)

Read Before Playing Photo, Video, or Music Files

Photo, Video, and Music File Use Limitations

- The TV supports MSC (Mass Storage Class) USB devices only. MSC is a class designation for
 mass storage devices. Types of MSC devices include external hard drives, flash card readers, and
 digital cameras. (USB hubs are not supported.) These kinds of devices must be connected directly
 to the TV's USB port. The TV may not be able to recognize the USB device or read the files on
 the device if it is connected to the TV via a USB extension cable. Do not disconnect the USB
 device while transferring files.
- Certain digital cameras and audio devices may not be compatible with the TV.
- A USB device that requires high power (more than 500mA or 5V) may not be supported. The TV does not support HDDs (Hard Disk Drives) connected to the USB port.
- The TV supports the FAT, exFAT, and NTFS file systems.
- After sorting files in the Folder view mode, the TV can display up to 1,000 files per folder. If the USB device contains more than 8,000 files and folders, however, some files and folders might not be accessible.
- The PTP (pier to pier) connection mode is available only for digital cameras. If you connect a smartphone or tablet to the TV using PTP mode, the TV will not recognize it.

Sending Files between Storage Devices Table

Storage device containing media content	Target device		
USB Device	DLNA Device, SugarSync, Dropbox, SkyDrive, Mobile Device		
Camera	DLNA Device		
DLNA Device	USB Device		
SugarSync, Dropbox, SkyDrive	USB Device		
Mobile Device	USB Device		

Supported External Subtitles

Certain files, depending on how they were encoded, may not play on the TV.

Name	Format
MPEG-4 Timed text	.ttxt
SAMI	.smi
SubRip	.srt
SubViewer	.sub
Micro DVD	.sub or .txt
SubStation Alpha	.ssa
Advanced SubStation Alpha	.ass
Powerdivx	.psb
SMPTE-TT Text	.xml

Supported Internal Subtitles



Certain files, depending on how they were encoded, may not play on the TV.

Name	Format	
Xsub	AVI	
SubStation Alpha	MKV	
Advanced SubStation Alpha	MKV	
SubRip	MKV	
MPEG-4 Timed text	MP4	
TTML in smooth streaming	MP4	
SMPTE-TT TEXT	MP4	
SMPTE-TT PNG	MP4	

Supported Image Formats and Resolutions

Certain files, depending on how they were encoded, may not play on the TV.

File Extension	Format	Resoltuion
*.jpg *.jpeg	JPEG	15360×8640
*.png	PNG	4096×4096
*.bmp	ВМР	4096×4096
*.mpo	MPO	15360×8640

Supported Music Formats and Codecs

Certain files, depending on how they were encoded, may not play on the TV.

File Extension	Format	Codec	Note
*.mp3	MPEG	MPEG1 Audio Layer 3	
*.m4a *.mpa *.aac	MPEG4	AAC	
*.flac	FLAC	FLAC	Supports up to 2 channels
*.ogg	OGG	Vorbis	Supports up to 2 channels
*.wma	WMA	WMA	Supports up to 10 Pro 5.1 channels WMA lossless audio is not supported Supports up to the M2 profile
*.wav	wav	wav	
*.mid *.midi	midi	midi	Supports type 0 and type 1 Seek is not supported USB is supported
*.ape	ape	ape	
*.aif *.aiff	AIFF	AIFF	
*.m4a	ALAC	ALAC	

Supported Video Codecs

Certain files, depending on how they were encoded, may not play on the TV.

File Extention	Container	Video Codec	Resolution	Frame rate (fps)	Bit rate (Mbps)	Audio Codec
		Motion JPEG	1280×720	30		
		HEVC(H.265)	1920×1080	FHD: MAX 30 HD: MAX 60	30	Dolby Digital LPCM ADPCM(IMA, MS) AAC HE-AAC WMA Dolby Digital Plus MPEG(MP3) DTS(Core, LBR) G.711(A-Law, µ-Law)
*.avi *.mkv		H.264 BP / MP / HP				
*.asf *.wmv	AVI MKV	DivX 3.11 / 4 / 5 / 6				
*.mp4 *.mov	ASF MP4	MPEG4 SP/ASP				
*.3gp *.vro	*.vro MOV *.mpg FLV *.mpeg VRO *.ts VOB *.tp PS *.trp TS *.mov *.flv *.vob *.svi	Window Media Video v9(VC1)				
*.mpg *.mpeg		MVC				
		MPEG2				
*.mov		MPEG1				
		Microsoft MPEG-4 v1, v2, v3				
*.m2ts *.mts		H,263 Sorrenson	1280x720	MAX 30		
*.divx		Window Media Video v7(WMV1) ,v8(WMV2)				
		VP6				
*.webm	WebM	VP8	1920×1080	6~30	20	Vorbis

Other Restrictions

- Codecs may not function properly if there is a problem with the content data,
- Video content does not play or does not play correctly if there is an error in the content or container.
- Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.
- If the Index Table is wrong, the Seek (Jump) function does not work.
- When playing video over a network connection, the video may not play smoothly because of data transmission speeds.
- Some USB/digital camera devices may not be compatible with the player.
- HEVC codec is only available in MKV /MP4 / TS containers.

Video Decoders

- Supports up to H.264, Level 4.1 (does not support FMO/ASO/RS)
- VC1 AP L4 is not supported.
- All video codecs excluding WMV v7, v8, MSMPEG4 v3, MVC, and VP6:

Below 1280x720: 60 frame max

Above 1280x720: 30 frame max

- GMC 2 or above is not supported.
- Supports SVAF Top/Bottom, Side by Side, and Left/Right view sequence type (2ES)
- Supports Blu-ray/DVD MVC specs only.

Audio Decoders

- WMA 10 Pro supports up to 5.1 channels. Supports up to the M2 profile. WMA lossless audio is not supported.
- WMA 10 pro M3 is not supported.
- QCELP and AMR NB/WB are not supported.
- Vorbis is supported for up to 2 channels.
- Dolby Digital Plus is supported for up to 5.1 channels.
- The DTS LBR codec is only available for MKV / MP4 /TS containers.

Read After Installing the TV

Picture Sizes and Input Signals

Input Signal	Picture Size		
Analog Channel/External Input	16:9, Zoom1, Zoom2, 4:3		
Component (480i, 480p)	16:9, Zoom1, Zoom2, 4:3		
Component (720p)	16:9, Wide Fit, 4:3		
Component (1080i, 1080p)	16:9, Wide Fit, 4:3, Screen Fit		
Digital Channel (720p)	16:9, Wide Fit, 4:3, Smart View 2		
Digital Channel (1080i, 1080p)	16:9, Wide Fit, 4:3, Screen Fit, Smart View 2		
HDMI (720p, 1080i, 1080p)	16:9, Wide Fit, 4:3, Screen Fit, Smart View 1, Smart View 2		

The **Picture Size** setting is applied to the current source. The applied **Picture Size** will remain in effect whenever you select that source unless you change it.

Installing an Anti-Theft Lock

An anti-theft lock is a physical device that can be used to protect the TV against theft. Look for the lock slot on the back of the TV. The slot has a \mathbb{R} icon next to it. To use the lock, wrap the lock cable around an object that is too heavy to carry and then thread it through the TV's lock slot. The lock, is sold separately.

The method of using an anti-theft lock may differ for each TV model. Refer to the lock's user manual for more information.

Read Before Setting Up a Wireless Internet Connection

Wireless Internet Precautions

- This TV supports the IEEE 802.11a/b/g /n communication protocols. Samsung recommends using IEEE 802.11n. Video files stored on a device connected to the TV via DLNA may not play back smoothly.
- To use wireless Internet, the TV must be connected to a wireless router or modem. If the wireless router supports DHCP, the TV can use a DHCP or static IP address to connect to the wireless network.
- Select a channel that is not currently in use for the wireless router. If the channel set for the
 wireless router is currently being used by another device, the result is usually interference and/or
 a communications failure.
- Most wireless networks have an optional security system. To enable a wireless network's security system, you need to create a security key using characters and numbers. This security key is then needed to connect to a security-enabled AP.

Wireless Security Protocols

The TV only supports the following wireless network security protocols and is unable to connect to non-certified wireless routers:

Authentication Modes: WEP, WPAPSK, WPA2PSK

Encryption Types: WEP, TKIP, AES

In compliance with the newest Wi-Fi certification specifications, Samsung TVs do not support WEP or TKIP security encryption in networks running in the 802.11n mode.

If the wireless router supports WPS (Wi-Fi Protected Setup), you can connect the TV to your network using PBC (Push Button Configuration) or a PIN (Personal Identification Number). WPS automatically configures the SSID and WPA key settings.

Read Before Connecting a Computer (Supported Resolutions) - For the LED 5, 6 series models

When you connect your TV to a computer, set the computer's video card to one of the standard resolutions listed in the tables below or on the next page. The TV will automatically adjust to the resolution you choose. Note that the optimal and recommended resolution is 1920 x1080.

Choosing a resolution not included in the tables can result in a blank screen or just the power indicator turning on.

Refer to the user manual of your graphics card for compatible resolutions.

IBM

Resolution (DotsxLines)	Display Format	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	Clock Frequency (MHz)	Polarity (Horizontal/ Vertical)
720×400	70Hz	31,469	70,087	28,322	-/+

MAC

Resolution (DotsxLines)	Display Format	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	Clock Frequency (MHz)	Polarity (Horizontal/ Vertical)
640×480	67Hz	35,000	66.667	30.240	-/-
832x624	75Hz	49,726	74,551	57.284	-/-
1152x870	75Hz	68,681	75,062	100.000	-/-

VESA DMT

Resolution (DotsxLines)	Display Format	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	Clock Frequency (MHz)	Polarity (Horizontal/ Vertical)
640×480	60Hz	31,469	59.940	25,175	-/-
640×480	72Hz	37,861	72,809	31,500	-/-
640×480	75Hz	37,500	75,000	31,500	-/-
800×600	60Hz	37,879	60,317	40.000	+/+
800×600	72Hz	48.077	72,188	50.000	+/+
800×600	75Hz	46,875	75,000	49.500	+/+
1024x768	60Hz	48,363	60.004	65,000	-/-
1024x768	70Hz	56.476	70.069	75.000	-/-
1024x768	75Hz	60.023	75.029	78.750	+/+
1152x864	75Hz	67,500	75,000	108,000	+/+
1280x720	60Hz	45,000	60.000	74,250	+/+
1280x800	60Hz	49,702	59,810	83,500	-/+
1280×1024	60Hz	63,981	60.020	108,000	+/+
1280×1024	75Hz	79.976	75,025	135,000	+/+
1366x768	60Hz	47,712	59.790	85,500	+/+
1440×900	60Hz	55,935	59.887	106,500	-/+
1600×900RB	60Hz	60,000	60,000	108,000	+/+
1680×1050	60Hz	65,290	59.954	146,250	-/+
1920×1080	60Hz	67.500	60,000	148,500	+/+

Read Before Connecting a Computer (Supported Resolutions) - For the LED 4 series models

When you connect your TV to a computer, set the computer's video card to one of the standard resolutions listed in the tables below or on the next page. The TV will automatically adjust to the resolution you choose. Note that the optimal and recommended resolution is 1366×768 .

Choosing a resolution not included in the tables can result in a blank screen or just the power indicator turning on.

Refer to the user manual of your graphics card for compatible resolutions.

IBM

Resolution (DotsxLines)	Display Format	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	Clock Frequency (MHz)	Polarity (Horizontal/ Vertical)
720×400	70Hz	31,469	70,087	28,322	-/+

MAC

Resolution (DotsxLines)	Display Format	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	Clock Frequency (MHz)	Polarity (Horizontal/ Vertical)
640×480	67Hz	35,000	66,667	30.240	-/-
832×624	75Hz	49,726	74.551	57,284	-/-

VESA DMT

Resolution (DotsxLines)	Display Format	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	Clock Frequency (MHz)	Polarity (Horizontal/ Vertical)
640×480	60Hz	31,469	59.940	25,175	-/-
640×480	72Hz	37,861	72,809	31,500	-/-
640×480	75Hz	37,500	75,000	31,500	-/-
800×600	60Hz	37,879	60,317	40.000	+/+
800×600	72Hz	48.077	72,188	50,000	+/+
800×600	75Hz	46,875	75,000	49,500	+/+
1024x768	60Hz	48,363	60.004	65,000	-/-
1024x768	70Hz	56.476	70,069	75,000	-/-
1024x768	75Hz	60,023	75,029	78,750	+/+
1280x720	60Hz	45,000	60,000	74.250	+/+
1366×768	60Hz	47.712	59.790	85,500	+/+

Supported Resolutions for Video Signal

CEA-861

Resolution (DotsxLines)	Display Format	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	Clock Frequency (MHz)	Polarity (Horizontal/ Vertical)
720(1440)×480i	60Hz	15,734	59.940	27.000	-/-
720(1440)×576i	50Hz	15,625	50,000	27.000	-/-
720×480	60Hz	31,469	59.940	27.000	-/-
720×576	50Hz	31,250	50,000	27.000	-/-
1280×720	60Hz	45,000	60,000	74.250	+/+
1280×720	50Hz	37.500	50,000	74.250	+/+
1920×1080i	60Hz	33,750	60,000	74.250	+/+
1920×1080i	50Hz	28,125	50,000	74.250	+/+
1920×1080	60Hz	67.500	60,000	148.500	+/+
1920×1080	50Hz	56,250	50,000	148.500	+/+
1920×1080	30Hz	33,750	30,000	74.250	+/+
1920×1080	25Hz	28,125	25,000	74.250	+/+
1920×1080	24Hz	27.000	24,000	74.250	+/+

License



DivX Certified® to play DivX® video up to HD 1080p, including premium content.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that has passed rigorous testing to verify that it plays DivX video. Visit divx. com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license

Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274



Manufactured under a license from U.S. Patent No's: 5,956,674, 5,974,380, 5,978,762, 6,487,535, 6,226,616, 7,212,872, 7,003,467, 7,272,567, 7,668,723, 7,392,195, 7,930,184, 7,333,929 and 7,548,853. DTS, the Symbol, and DTS and the Symbol together are registered trademarks & DTS Premium Sound | 5.1 is a trademark of DTS, Inc. ©2012 DTS, Inc. All Rights Reserved.



Manufactured under a license from U.S. Patent No's: 6,285,767, 8,027,477, 5,319,713, 5,333,201, 5,638,452, 5,771,295, 5,970,152, 5,912,976, 7,200,236, 7,492,907, 8,050,434, 7,720,240, 7,031,474, 7,907,736 and 7,764,802. DTS, the Symbol, and DTS and the Symbol together are registered trademarks & DTS Studio Sound is a trademark of DTS, Inc. ©2012 DTS, Inc. All Rights Reserved.



Manufactured under license from Dolby Laboratories.

Dolby and the double-D symbol are trademarks of Dolby Laboratories.

HDMI

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Open Source License Notice

Open Source used in this product can be found on the following webpage. (http://opensource.samsung.com) Open Source License Notice is written only English.



Glossary

480i/480p/720p/1080i/1080p

Generally refers to the number of effective scanning lines that determines the screen's resolution. There are two scanning methods: interlaced and progressive.

Scanning

Sequential projection of pixels to form images. The higher the number of pixels, the clearer and more vivid the images.

Progressive

A sequential scanning method that scans every line, one after another,

Interlaced

A staggered scanning method that scans every other line until the end of the screen and then fills in the remaining lines.

Example) If the number of horizontal scan lines is 480i

Scans 240 lines from start to finish and then scans the remaining 240 lines for a total of 480 lines.

* General differences between 480i and 480p are as follows:

	480i	480p	
Horizontal Frequency	15,75Khz	31,5Khz	
FPS	30	60	
Lines on Screen	480	480	

• DVI (Digital Visual Interface)

Connecting the TV's DVI connector to a computer's DVI connector via an HDMI-to-DVI cable lets you use the TV as a computer monitor. However, HDMI-to-DVI cables deliver video signals only. You must connect a set of speakers to the computer using a separate cable to hear the computer's audio.

HDMI (High Definition Multimedia Interface)

HDMI is a method of transmitting both video and audio signals via a single cable.

Dynamic versus Static IP Addresses

If the network requires a dynamic IP address, use an ADSL modem or router that supports the Dynamic Host Configuration Protocol (DHCP), Modems and routers that support DHCP automatically provide the IP address, subnet mask, gateway and DNS values the TV needs to access the Internet, so they do not have to be entered manually. Most home networks use a dynamic IP address.

If the network requires a static IP address, enter the IP address, subnet mask, gateway, and DNS values manually when setting up the network connection. To get the IP address, subnet mask, gateway and DNS values, contact your Internet Service Provider (ISP).

If the network requires a static IP address, use an ADSL modem that supports DHCP. ADSL modems that support DHCP also allow static IP addresses.

Ethernet

Ethernet is a LAN (Local Area Network) that uses coaxial cables standardized by the IEEE.

Component Connection

Component connections are mostly used for game consoles and transmit the video signal by splitting it into a luminance signal (Y) and two color signals (Pb and Pr). The connector is marked as [Component IN]_(Pr, Pb, Y) on the back of the TV. On some devices, it is sometimes marked as Cr, Cb, Y. Cb and Cr are the digital conversions of the Pb and Pr signals.

The connectors are normally color-coded red (R), blue (B), and green (G) and offer the best picture quality possible for an analog connection.